


Taster (Wechsler)
Push-button switch (Two-way)

Taster Öffner
Push-button switch, normally closed

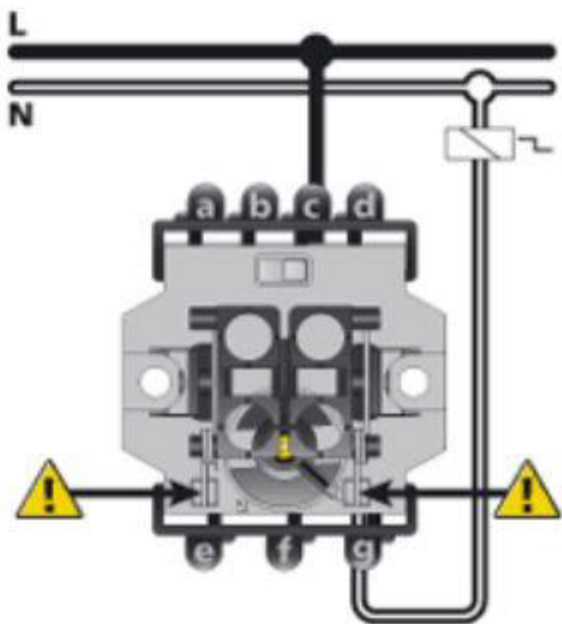

Taster Schließer
Push-button switch, normally open

