



Einhell

EXPERT PLUS



Cordless Pruning Saw

GE-GS 18 Li-Solo

Item No.: 3408220

Ident No.: 11016

Bar Code: 4006825618389

The Einhell GE-GS 18 Li - Solo cordless tree pruning saw is a reliable helper in the garden. Thanks to its high-quality features the cordless tree pruning saw with a blade length of 150 millimeters will even cut through very thick branches with diameters of up to 90 millimeters effortlessly. The saw blade on the Einhell cordless tree pruning saw can be changed quickly and easily because no tools are required to do so. The removable branch handle enables branches to be cut easily in every situation and therefore contributes to tireless working and a perfectly firm hold. The GE-GS 18 Li – Solo cordless tree pruning saw is equipped with a high-quality KWB saw blade "Made in Switzerland". The battery and charger are available separately.

Features & Benefits

 
- Easy blade change without tools
- Removable branch handle for cutting branches easily
- Softgrip for comfortable operation and a perfectly firm hold
- KWB High-quality saw blade "Made in Switzerland"
- Supplied without battery and charger (available separately)

Technical Data

- | | |
|---------------------------------------|--------|
| - Saw blade length | 150 mm |
| - Cutting depth without branch handle | 90 mm |
| - Cutting depth with branch handle | 70 mm |

Logistic Data

- | | |
|--------------------------------------|--------------------|
| - Product weight (kg) | 1.14 |
| - Gross weight (kg) | 1.68 |
| - Dimensions single packaging | 405 x 201 x 80 mm |
| - Pieces per export carton | 6 Pieces |
| - Gross weight of export carton | 10.86 kg |
| - Container quantity (20"/40"/40"HC) | 3114 6468 7728 |

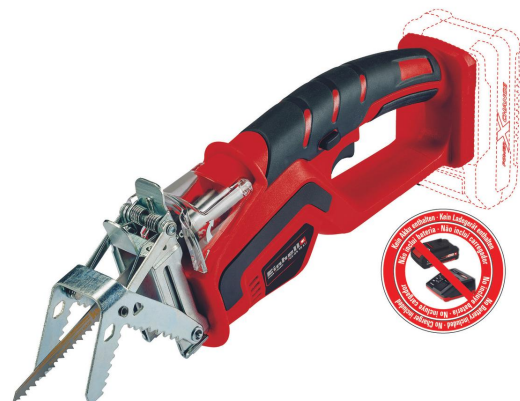

TOOLLESS BLADE CHANGE



INCL. KWB SAWBLADE



BRANCH HANDLE



 
METAL GEAR



Ausgabe 07/2021
6 Produkte im Test
www.selbst.de



18 V

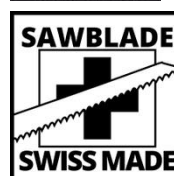

SAWBLADE
SWISS MADE



90 mm

Available as special accessories



18V 2,0Ah Power X-Change
Battery
Item No.: 4511395
Bar Code: 4006825610369
Einhell Accessory



18V 4,0Ah PXC Starter Kit 1
PXC-Starter-Kit
Item No.: 4512042
Bar Code: 4006825613704
Einhell Accessory



Power X-Twincharger 3A
Charger
Item No.: 4512069
Bar Code: 4006825629729
Einhell Accessory



Power X-Boostcharger 6A
Charger
Item No.: 4512064
Bar Code: 4006825629019
Einhell Accessory



18V 4,0Ah Power X-Change 1
Battery
Item No.: 4511396
Bar Code: 4006825610376
Einhell Accessory



18V 5,2Ah Power X-Change Plus
Battery
Item No.: 4511437
Bar Code: 4006825616606
Einhell Accessory



18V 2,0Ah PXC Starter Kit
PXC-Starter-Kit
Item No.: 4512040
Bar Code: 4006825613681
Einhell Accessory



18V 3,0 Ah Power-X-Change 2
Battery
Item No.: 4511341
Bar Code: 4006825590593
Einhell Accessory

Battery-Running-Times

One Battery for All	 cutting ¹ (pieces)
1.5 Ah	70
2.0 Ah	90
2.5 Ah	115
3.0 Ah	140
4.0 Ah	180
5.2 Ah	240
6.0 Ah	280
8.0 Ah	360

Test setup:

1) wood - round wood Ø 60 mm