

268mm

193mm



EU Konformitätserklärung

Name und Adresse des Inverkehrbringers: F-H-S International GmbH & Co. KG
An der Eickesmühle 34
41238 Mönchengladbach
Germany

Produktbeschreibung: Art.-Nr.: 450SEL/450SELG
Produktbeschreibung: Christbaumständer mit LED Füllstandsanzeige

Zur Beurteilung der Erzeugnisse wurden folgende Normen herangezogen: Maschinenrichtlinie 2006/42/EG
EMV Richtlinie 2014/30/EU
EN 55015:2019+A11:2020
EN 61547:2009
RoHS 2011/65/EU

Diese Erklärung wird verantwortlich für den Inverkehrbringer.

Mönchengladbach, 23.02.2024

F-H-S International GmbH & Co. KG
An der Eickesmühle 34
D-41238 Mönchengladbach
Tel: +49 (0) 20 255 2166
Fax: +49 (0) 20 255 2170
E-Mail: info@fhs-international.de
Internet: www.fhs-international.de
Holger Beckers
Vertriebsleiter

Star-Max
by F-H-S International

Bedienungsanleitung

Christbaumständer mit LED Füllstandsanzeige




Art. Nr. 450SEL/450SELG Baumhöhe max. 4,5m
Stammdurchmesser 5-17cm
Wassertank max. 6,3L



F-H-S International GmbH & Co. KG - An der Eickesmühle 34
D 41238 Mönchengladbach - info@fhs-international.de

DE

Lesen Sie unsere Bedienungsanleitung vor dem ersten Gebrauch aufmerksam!

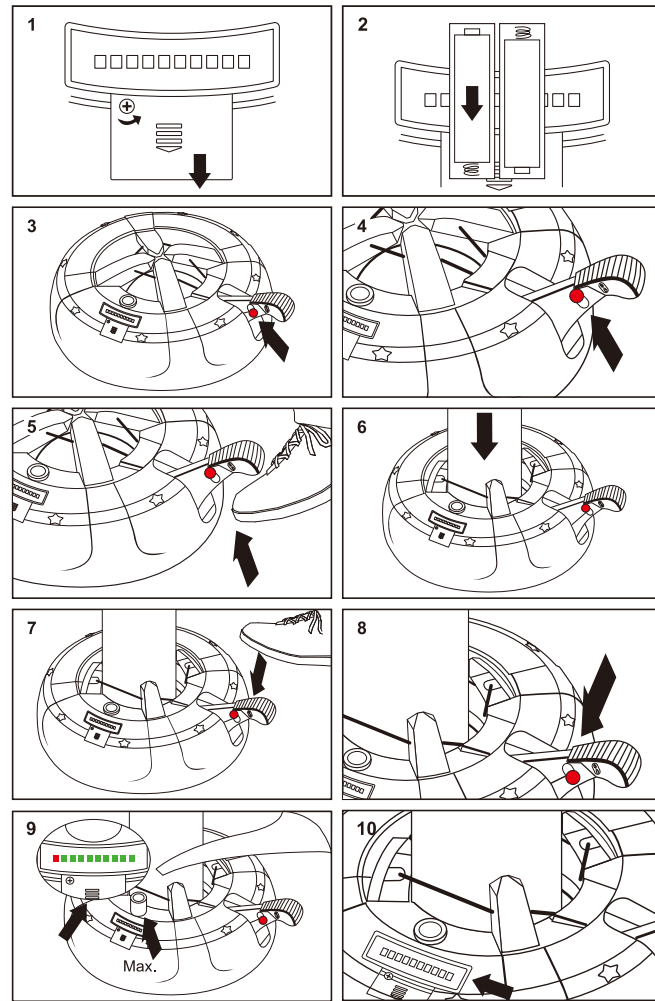

ACHTUNG!
Wasser erst nach dem Einsetzen des Baumes bis zur Maximalmarkierung einfüllen.
Bei Überfüllung läuft Wasser aus und kann ggf. Schäden verursachen.

2

3

Allgemeine Sicherheitshinweise

- Benutzen Sie den Christbaumständer nur gemäß der Bedienungsanleitung und nur zum Spannen von Christbäumen im Innenbereich! (Bitte Baumstamm vor Einsetzen gerade abschneiden)
- Bei der Aufstellung ist darauf zu achten, dass sowohl der Christbaumständer wie auch der Baum einen geraden, festen Stand haben. Bei einseitig oder übergewichtig gewachsenen Bäumen ist auf eine ausgewogene Gewichtsverteilung zu achten!
- Lassen Sie den Christbaumständer nicht von Kindern bedienen!
- Baum ohne Schmuck aufstellen!
- WARNHINWEIS!** Den Baum mit brennenden Kerzen niemals unbeaufsichtigt lassen!
- Aufgrund der bestehenden Verletzungsgefahr ist ein Eingreifen in die Klemmvorrichtung zu vermeiden! Der Fußhebel ist nur mit dem Fuß zu betätigen!
- Achtung! Beschädigte Ständer dürfen nicht weiter verwendet werden.
- Der Hersteller haftet nur für Schäden, die in Folge fehlerhafter Materialien oder fehlerhafter Verarbeitung des Christbaumständers auftreten. Fehler durch unsachgemäße Handhabung sind von der Haftung ausgenommen.
- Sollten seitens des Käufers am Christbaumständer bauliche Veränderungen vorgenommen werden oder bedingt durch unsachgemäße Handhabung oder Reinigung (Säuren, Reinigungs- oder Putzmittel) Schäden auftreten, wird jegliche Haftung seitens des Herstellers ausgeschlossen.
- Zufällig entstandene oder selbstverschuldete Schäden, die durch den Käufer verursacht wurden, werden nicht erstattet!
- Bei lösen des Baumes ist darauf zu achten, dass dieser nicht kippen kann.
- Achten Sie darauf das die LED Füllstandsanzeige für den trockenen Innenraum gedacht ist, bitte kein Wasser über die Anzeige kippen.
- Achten Sie beim Einlegen der Batterien auf die richtige Polarität.
- Benutzen Sie immer Batterien gleichen Typs, wechseln Sie immer alle Batterien aus.
- Die LED können nicht gewechselt werden.
- Mitgelieferte Batterien können nicht aufgeladen werden.
- Batterien nicht ins Feuer werfen. Batterien dürfen nicht verschluckt werden.



Batterien und Akkus Batterien und Akkus dürfen nicht in den Hausmüll.

Jeder Verbraucher ist gesetzlich verpflichtet, alle Batterien und Akkus, egal ob Sie Schadstoffe enthalten oder nicht, bei einer Sammelstelle seiner Gemeinde/ seines Stadtteils abzugeben, damit sie umweltgerecht entsorgt werden. Batterien und Akkus immer im entladenen Zustand abgeben.



Entsorgung des Gerätes Altgeräte dürfen nicht in den Hausmüll


Sollte das Gerät einmal nicht mehr verwendet werden können, so ist der Verbraucher verpflichtet, Altgeräte vom Hausmüll getrennt zu entsorgen, dies kann bei Sammelstellen in der Gemeinde/ oder im Stadtteil bzw. beim Handel abgegeben werden. Damit wird gewährleistet, dass Altgeräte fachgerecht verwertet werden und keine negative Auswirkung auf die Umwelt haben.

AS 02/2024

4

GB

Read through this User Guide carefully before using the stand for the first time!

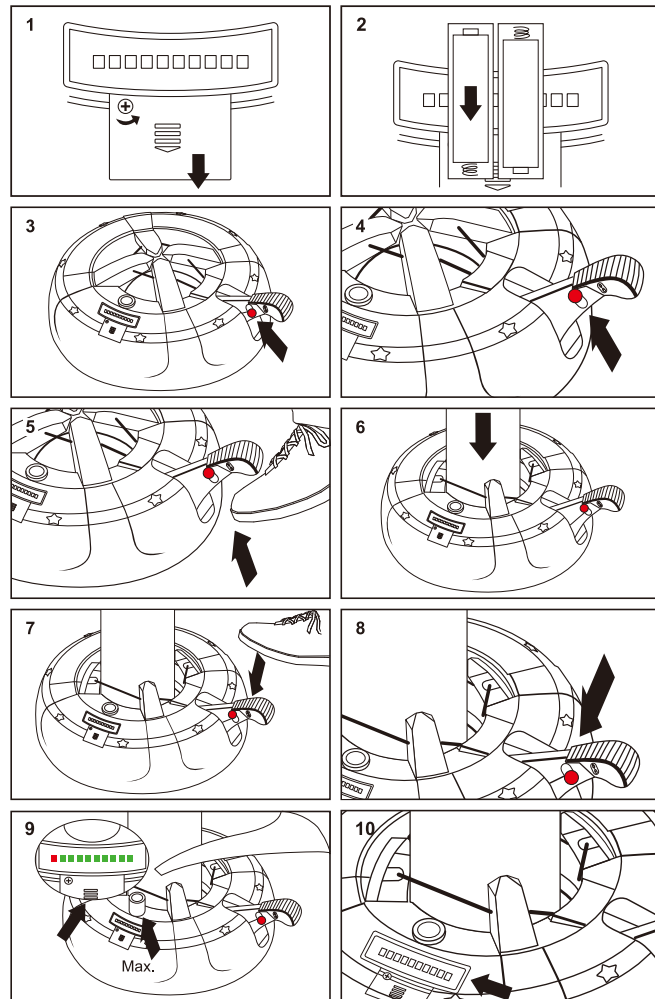

CAUTION!
Water must be poured in after the tree has been inserted and only as far as the maximum mark. In the event overfilling, the water will run out and may cause damage.

5

- Opening the battery compartment**
Loosen the screw on the cover and carefully pull out the battery compartment.
- Inserting the batteries**
Pay attention to the polarity of the + and - poles when inserting the 2x AAA batteries. As long as the Christmas tree stand is not filled, the display is in sequential light mode. Then push the battery compartment back into the housing and close the lid. Tighten the screw again so that the cover cannot be opened unintentionally.
- Securing foot lever on delivery**
This is done in the closed position with the foot lever secured. (see Picture 3)
- Opening the Christmas tree stand**
To open the Christmas tree stand, please push the slider of the lever lock into the "Up" position at the top. (marked green) (see Picture 4)
- Loosening the clamping device**
Press the foot lever upwards, with the tip of your foot over the pressure point! (see Picture 5) Keep your hands away from the clamping device, as the clamping claws spring open.
- Inserting the tree**
Place the tree centrally, upright and balanced into the Christmas tree stand. (Picture 6). The trunk must be firmly fixed on the spike in the Christmas tree stand.
- Closing the Christmas tree stand**
Press on the foot lever until the 4-way clamping device grips the tree firmly (Picture 7). Check that the tree is clamped securely by jiggling it lightly and, if necessary, repeating the clamping procedure.
- Securing the Christmas tree stand**
When the tree trunk has been securely restrained, push the slider on the locking device downwards into the "Closed" position (marked red) (Picture 8).
- Filling the Christmas tree stand**
Slowly fill the Christmas tree stand with water. As soon as water is filled in, the indicator light switches to filling mode. The LEDs go on one after the other, shortly before the maximum filling quantity, sequential light mode starts so that you do not overfill the Christmas tree stand. When all LEDs light up, the Christmas tree stand is filled to the maximum, do not refill any more water. The display works in real-time mode, i.e. it always shows the current fill level. Fill with water when the level is low. For additional protection, e.g. in case of empty batteries, the filling level is indicated via the mechanical float!
- Emptying the Christmas tree stand**
Carefully empty the Christmas tree stand by tilting it on the opposite side of the LED level indicator. Make sure that the display remains dry. Then dry all parts and remove the batteries until the next use. Oil metal parts a little if necessary. Before re-using check the cables and movable parts for stability, cracks etc.

6

General safety information

- Use the Christmas tree stand only as detailed in the user guide and only for clamping Christmas trees in interior areas! (Please cut the base of the tree trunk square before placing it in the stand)
- When setting up, ensure that both the Christmas tree stand and the tree itself have a level, solid base. For trees with either one-sided or voluminous growth, ensure the weight is distributed evenly!
- Do not allow children to operate the Christmas tree stand!
- Do not decorate the tree before placing it in the stand!
- Never leave a tree with burning candles unattended!
- Due to the danger of injury do not reach into the clamping device! The foot lever is only to be operated with the foot!
- Caution! Damaged stands may no longer be used.
- The manufacturer is only liable for damages resulting from defective materials or faulty workmanship in the Christmas tree stand. The manufacturer is not responsible for damages resulting from the improper use of the Christmas tree stand.
- Should any constructional alterations be made to the stand by the user, or damage be caused to it by improper handling or cleaning (e.g. use of acids or other aggressive detergents), all damage liabilities of the manufacturer will extinguish.
- Incidental damage caused by the user/purchaser either through accident or negligence will not be reimbursed!
- When loosening the tree, ensure that it cannot tip over.
- Make sure that the LED level indicator is intended for the dry interior, please do not tip any water over the indicator.
- Pay attention to the correct polarity when inserting the batteries.
- Always use batteries of the same type, always replace all batteries.
- The LED's cannot be replaced.
- The batteries supplied cannot be recharged.
- Do not throw batteries into a fire. Do not swallow batteries.



Batteries and rechargeable batteries Batteries and rechargeable batteries must not be disposed of in household waste.

As a consumer, you are obliged by law to hand in all batteries, regardless of whether they contain harmful substances or not, to your local authority/municipal collection point for environmentally friendly disposal. Only hand in discharged batteries.



Disposal of the device Old devices must not be disposed of in household waste

If the device can no longer be used, the consumer is obliged to dispose of it separately from normal domestic waste. Old devices can be handed in at local authority/municipal collection points or returned to the place of purchase. This ensures that old devices are recycled professionally and have no negative impact on the environment.

EU – Declaration of Conformity

We hereby declare that this product complies with the provisions of the Machinery Directive 2006/42/EC. You can obtain a copy of this declaration on our website www.fhs-international.de/downloads.html

7