


DAKOTA

Catch-Pits Installation Guide


PHASE 1

Dig a hole
10cm wider each side
than the catch-pit

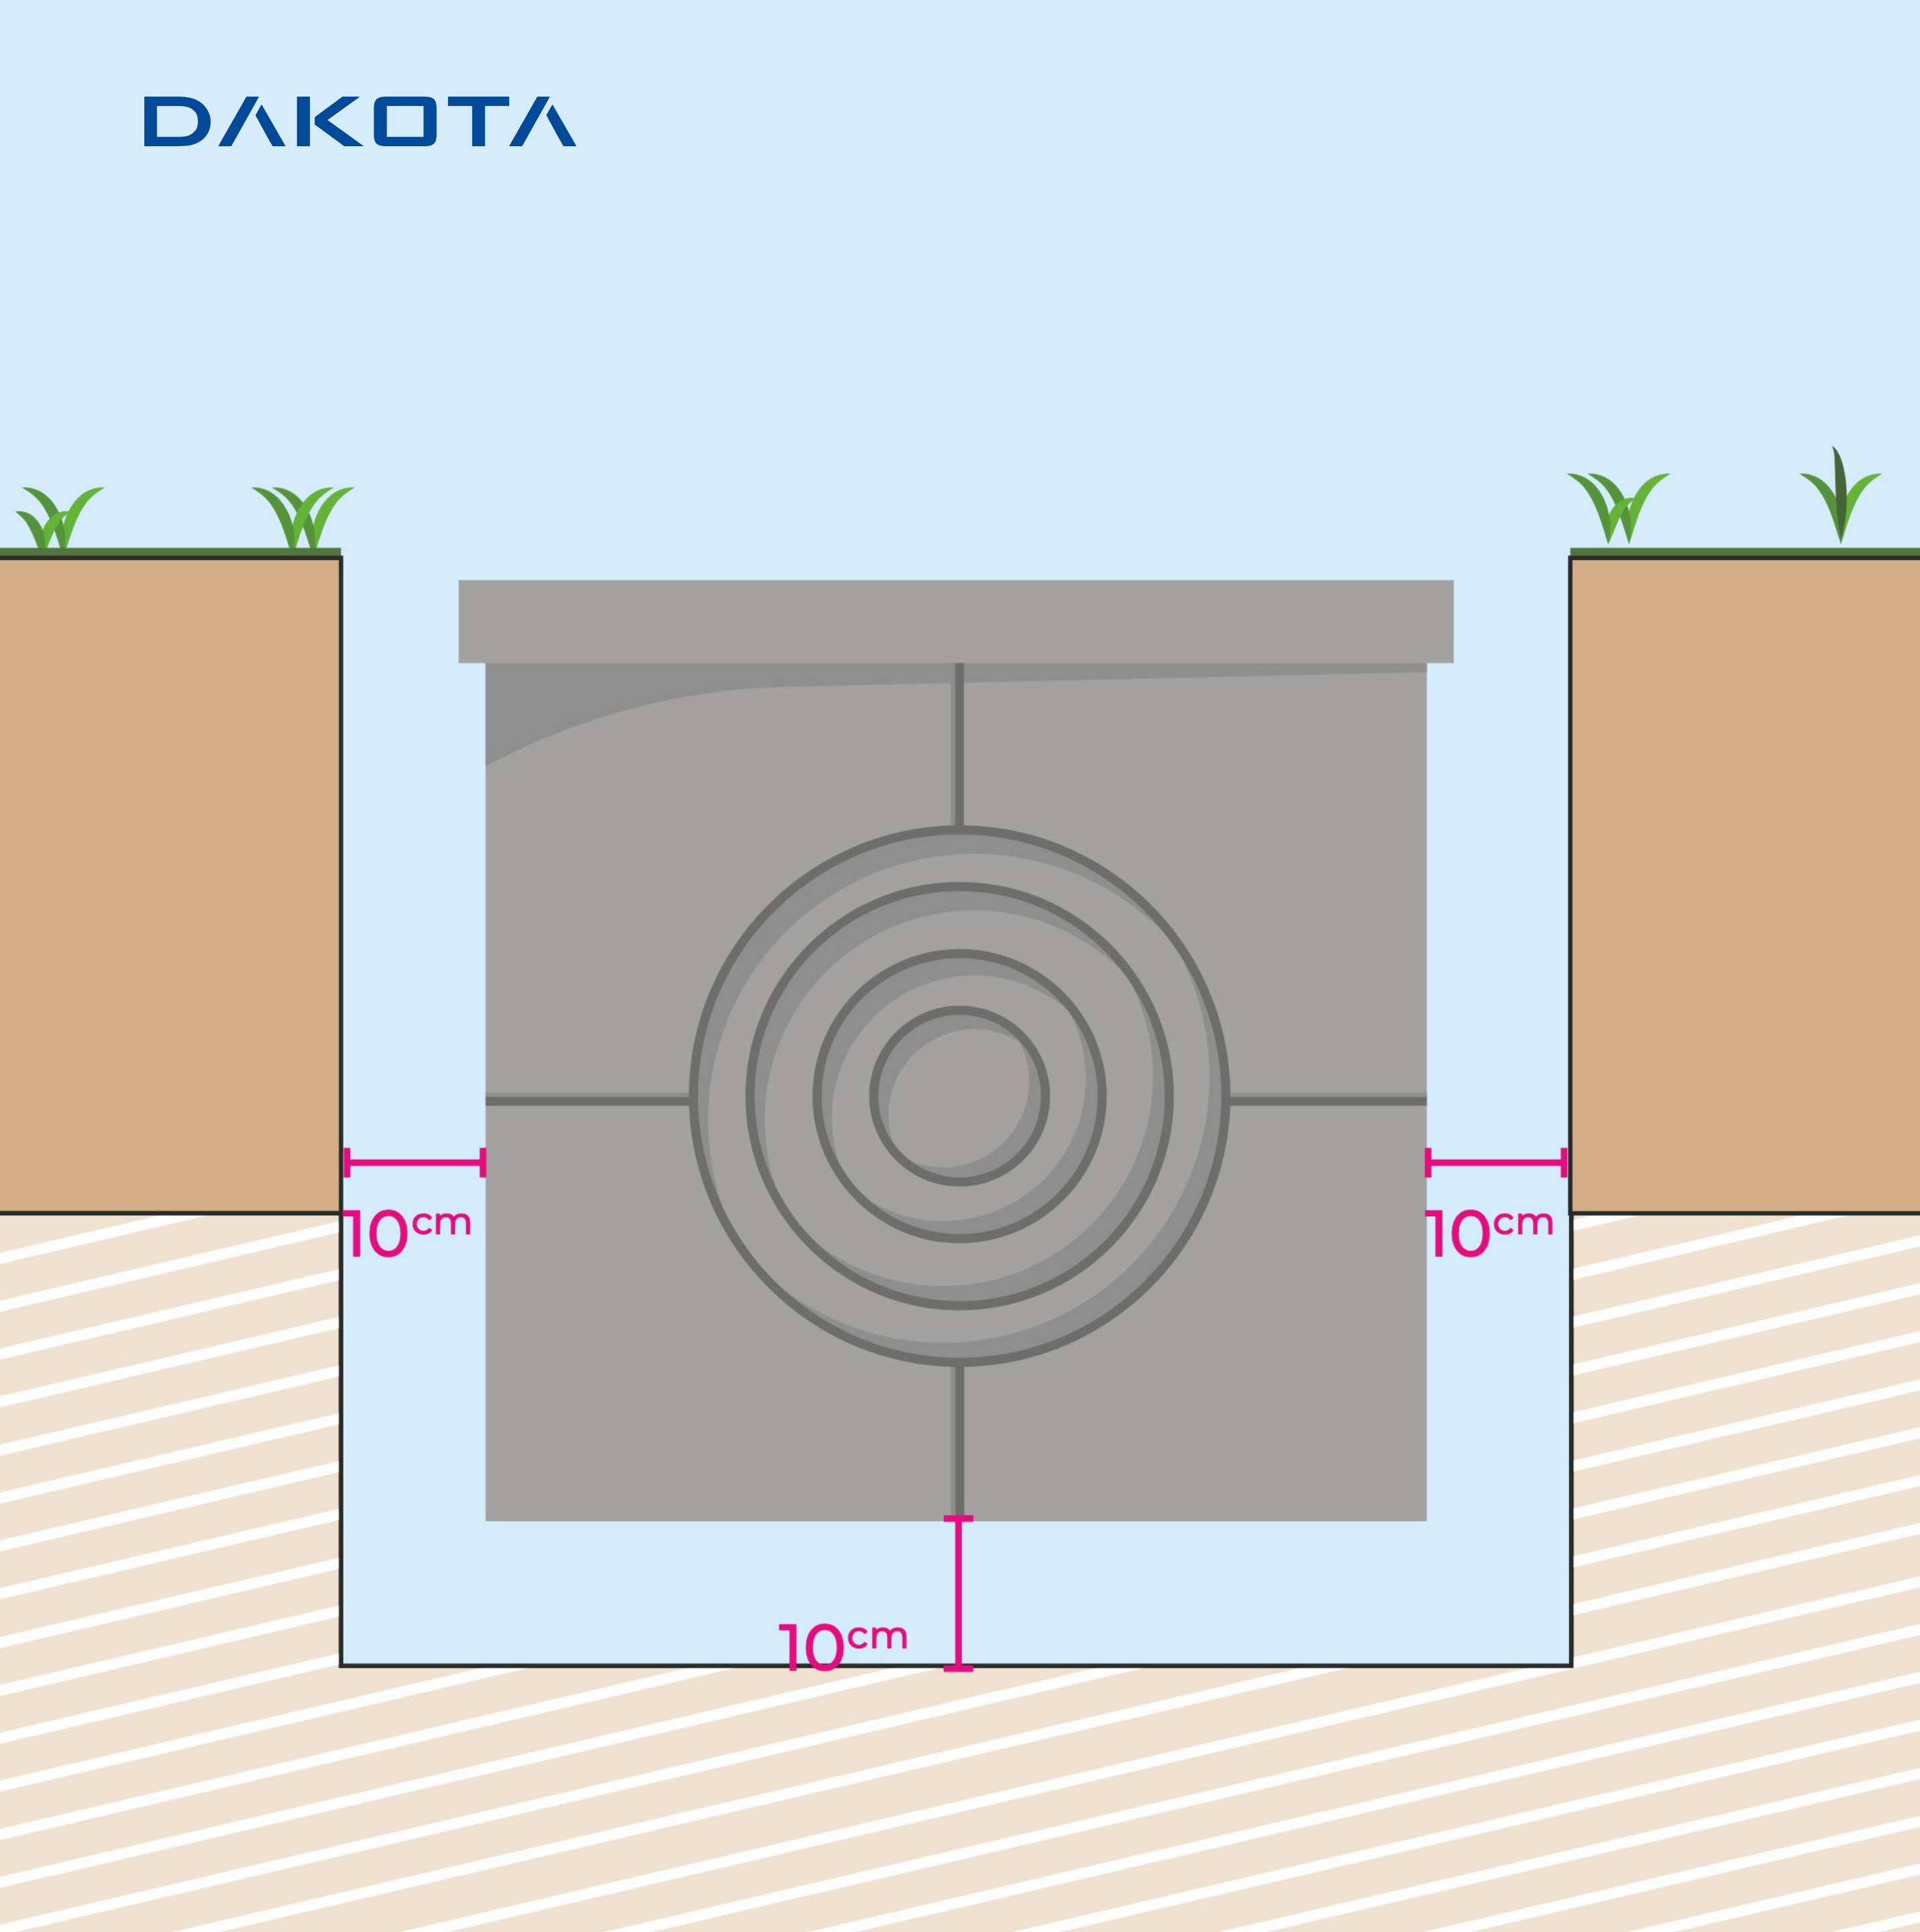


PHASE 2

Cast
concrete bed
10 cm high.

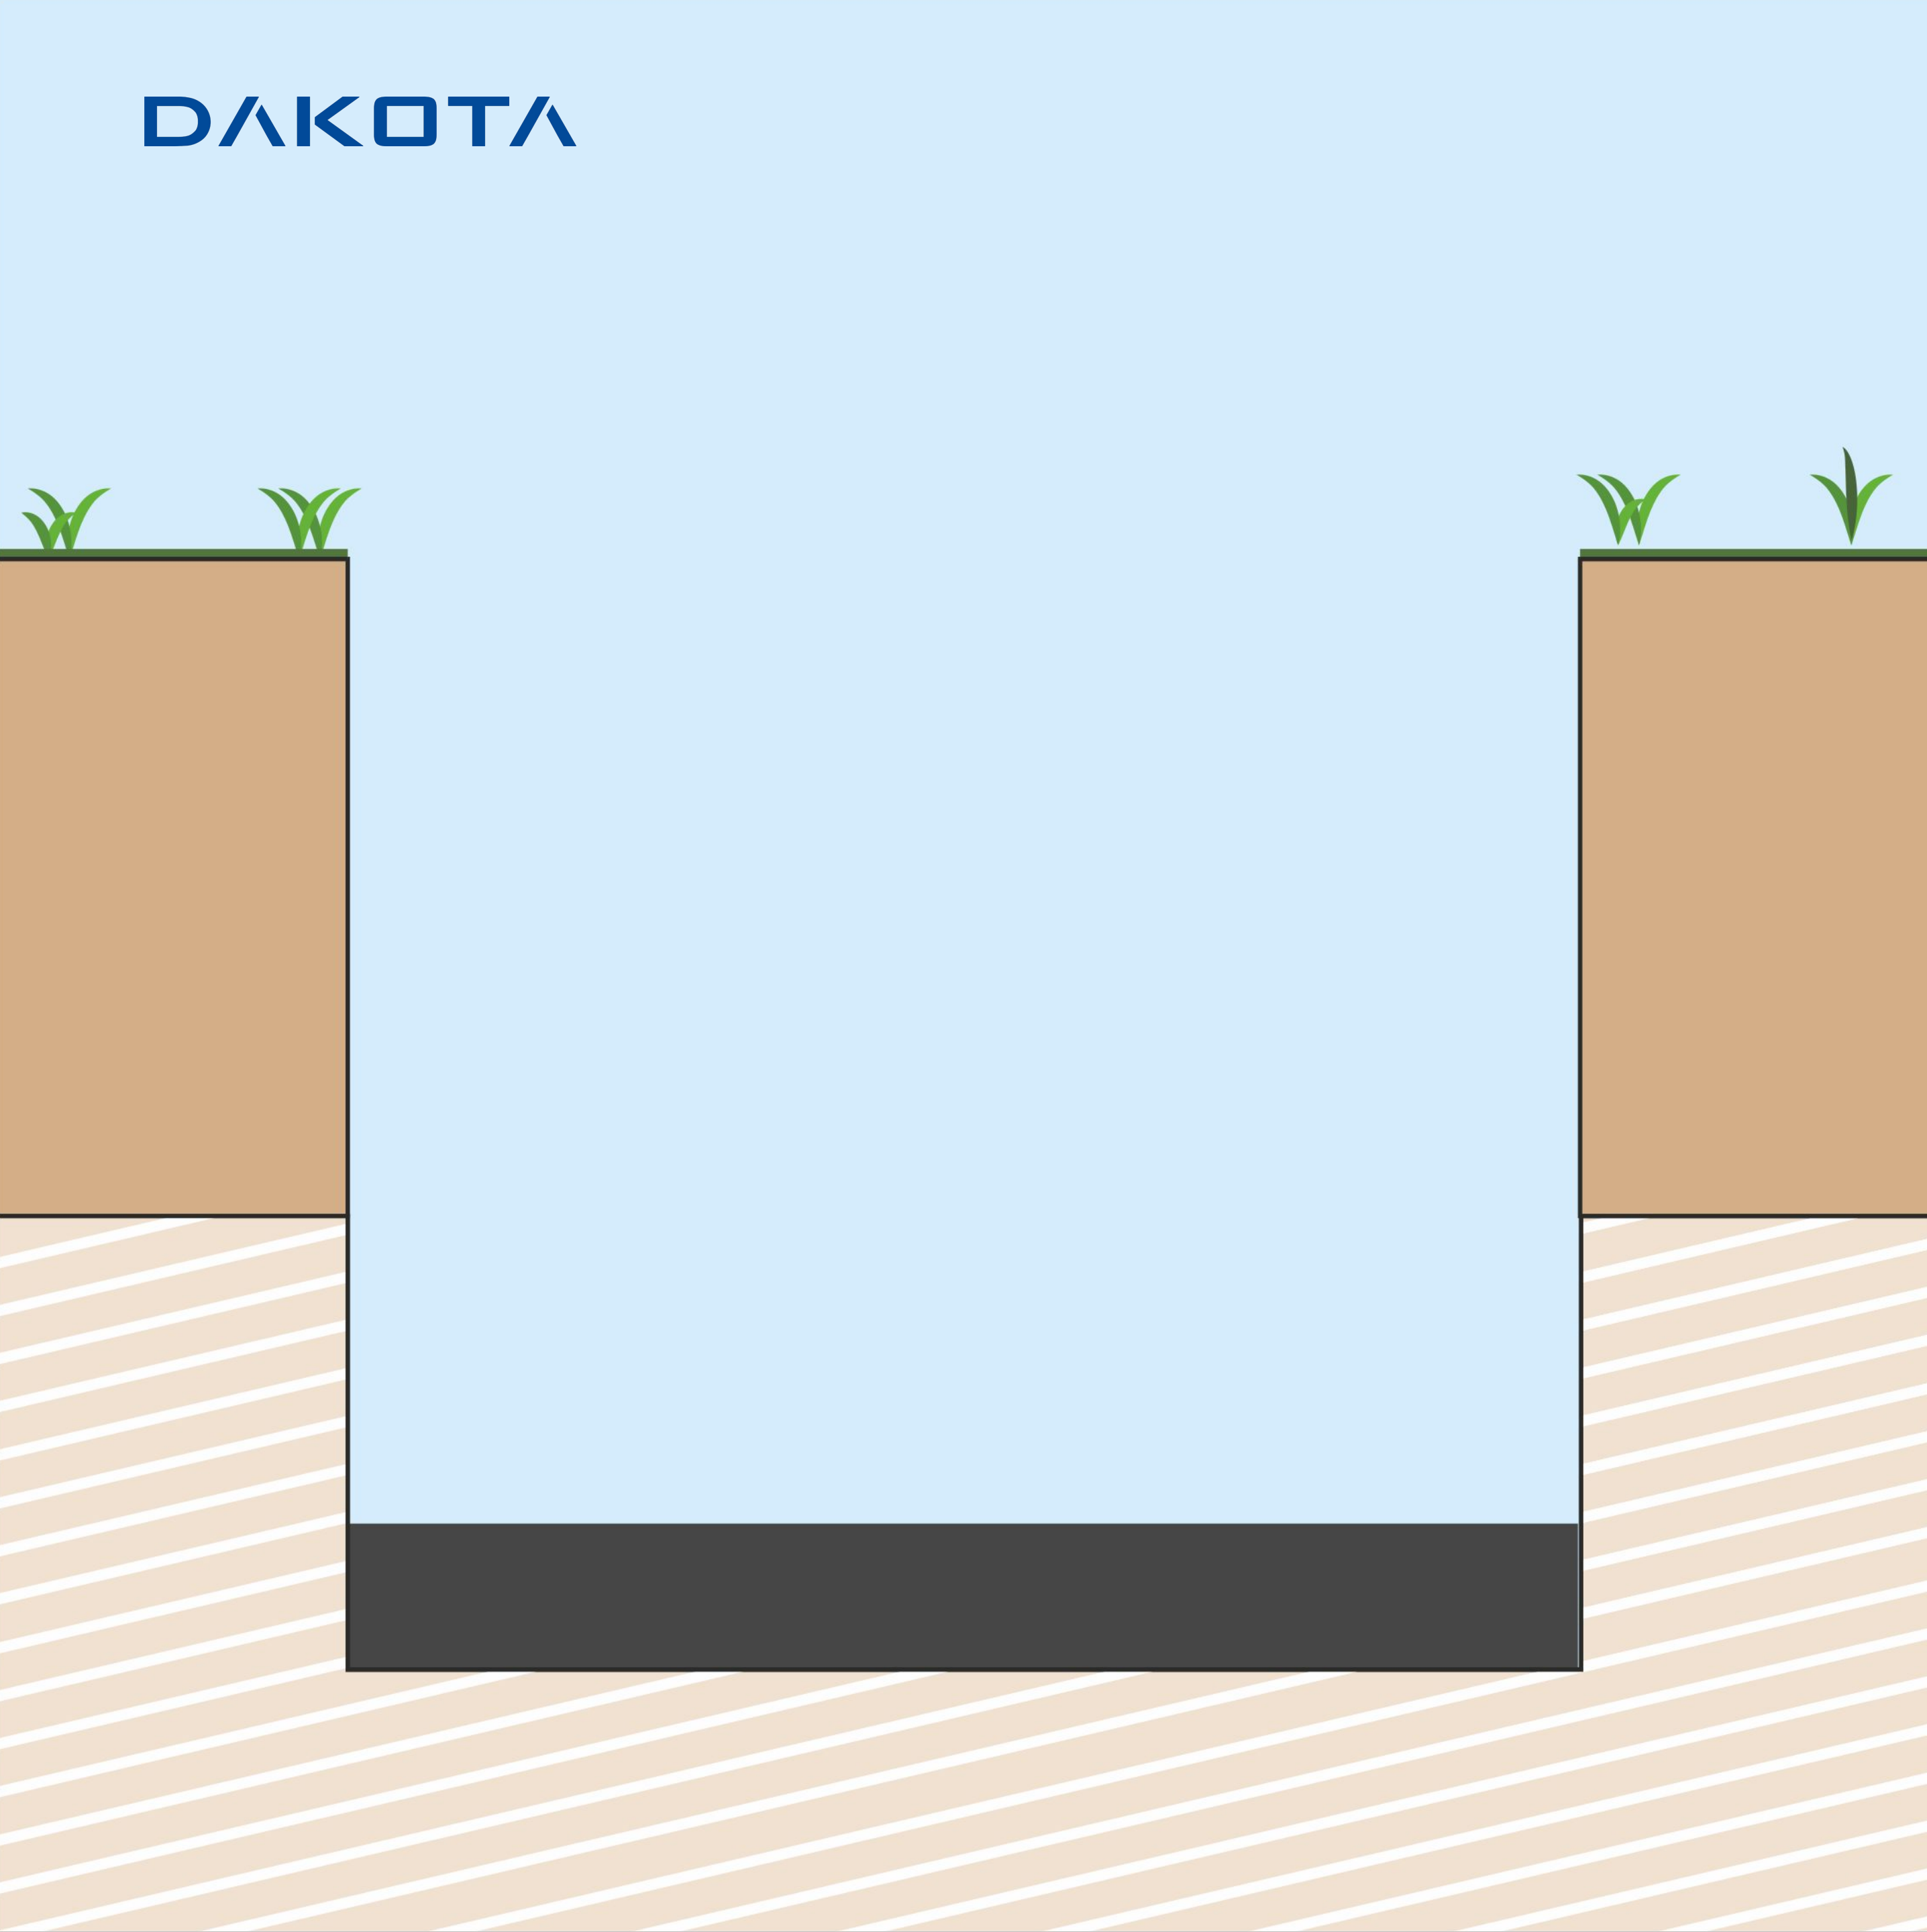


PHASE 3

Cut with a cutter and remove the diameter of the ring considering the size of the pipe.

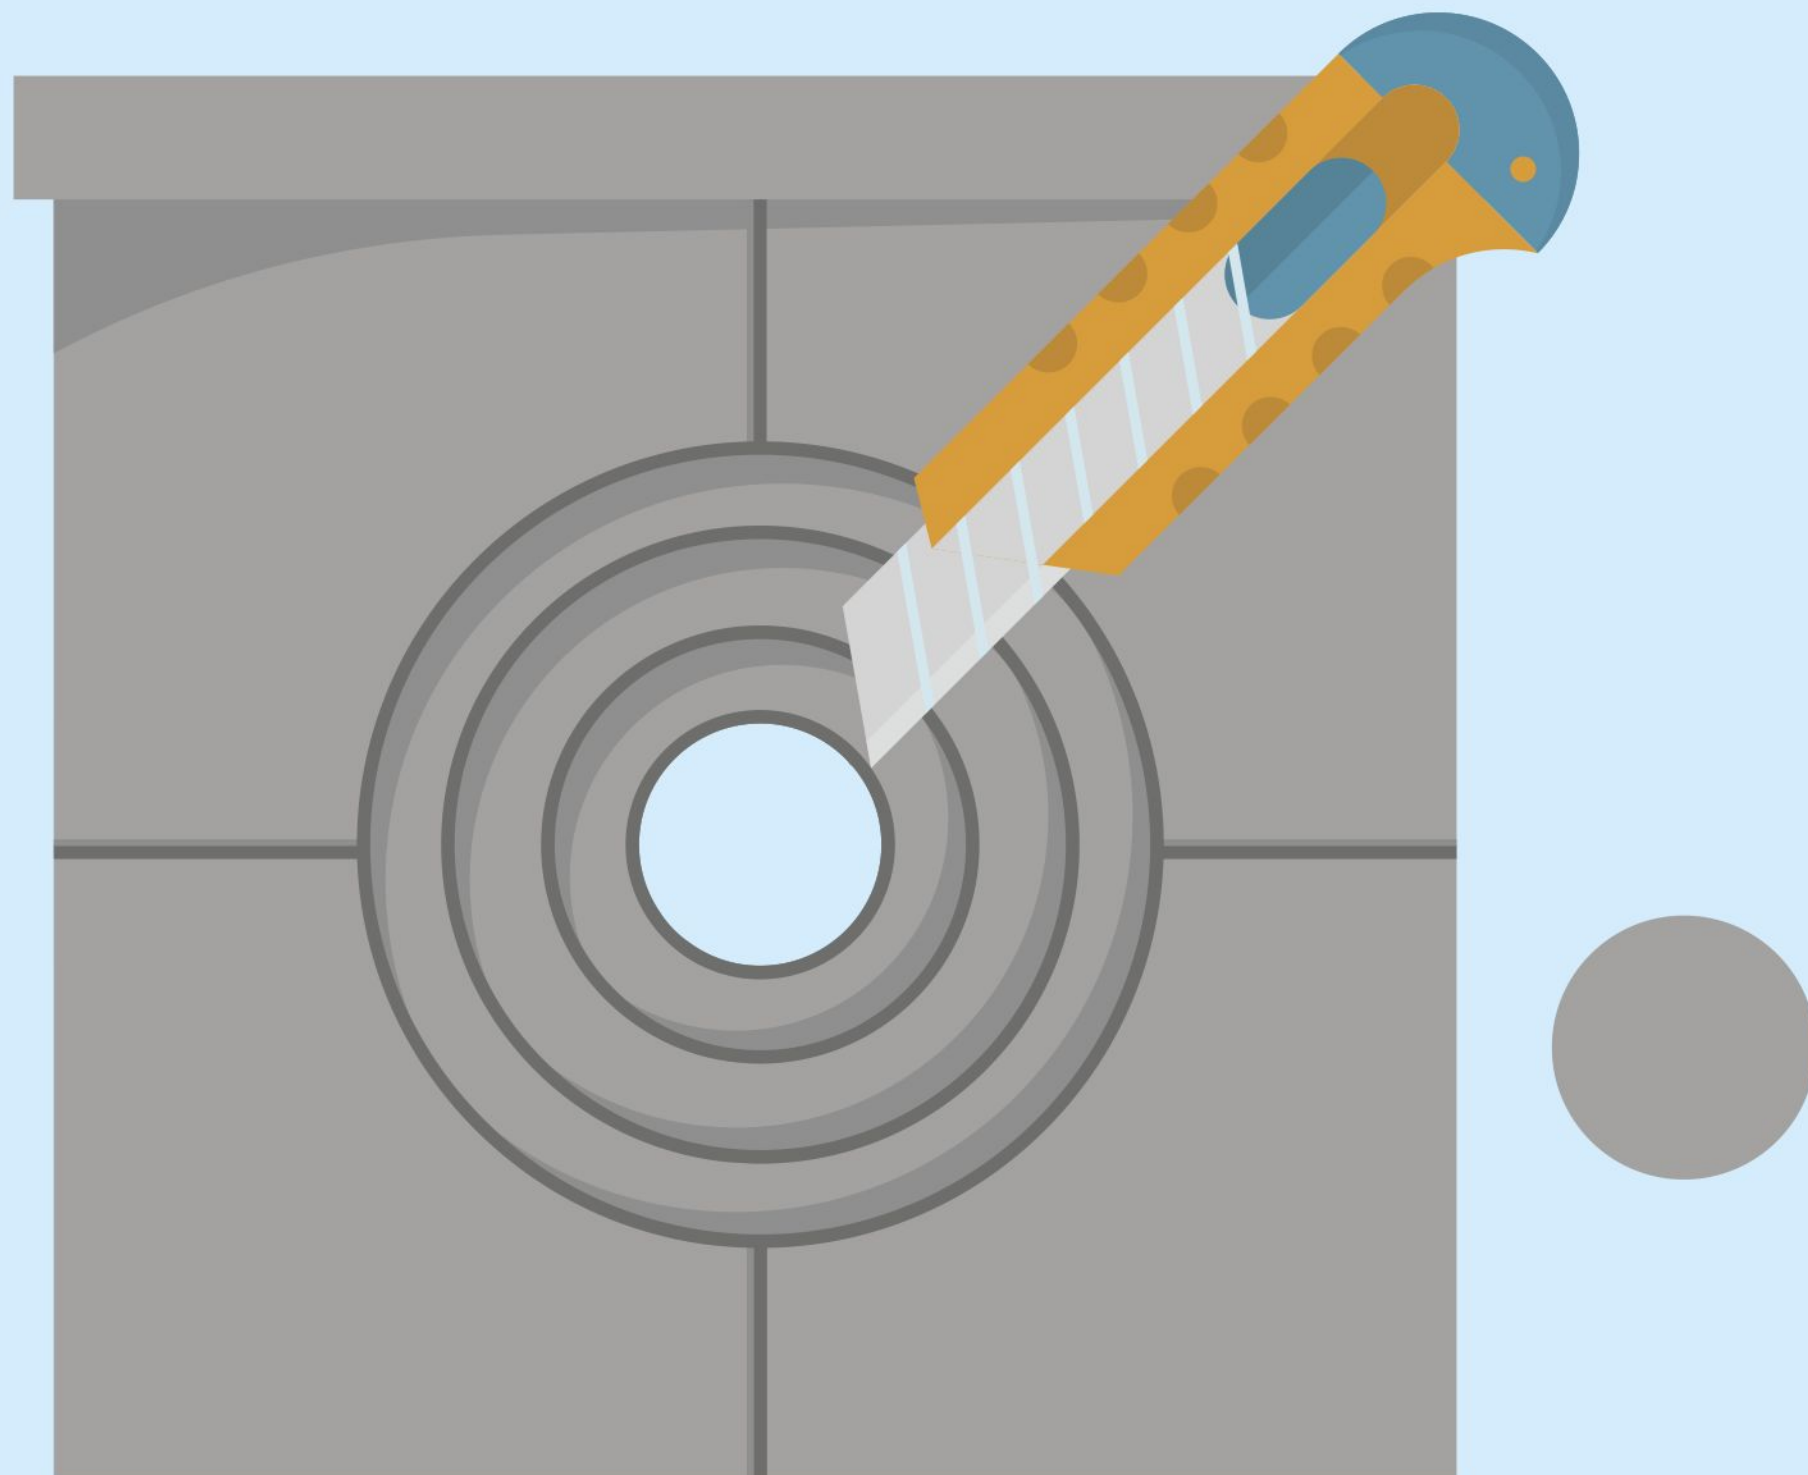


PHASE 4

Place the catch-pit in the hole, connect and seal the tube with silicone around the ring.

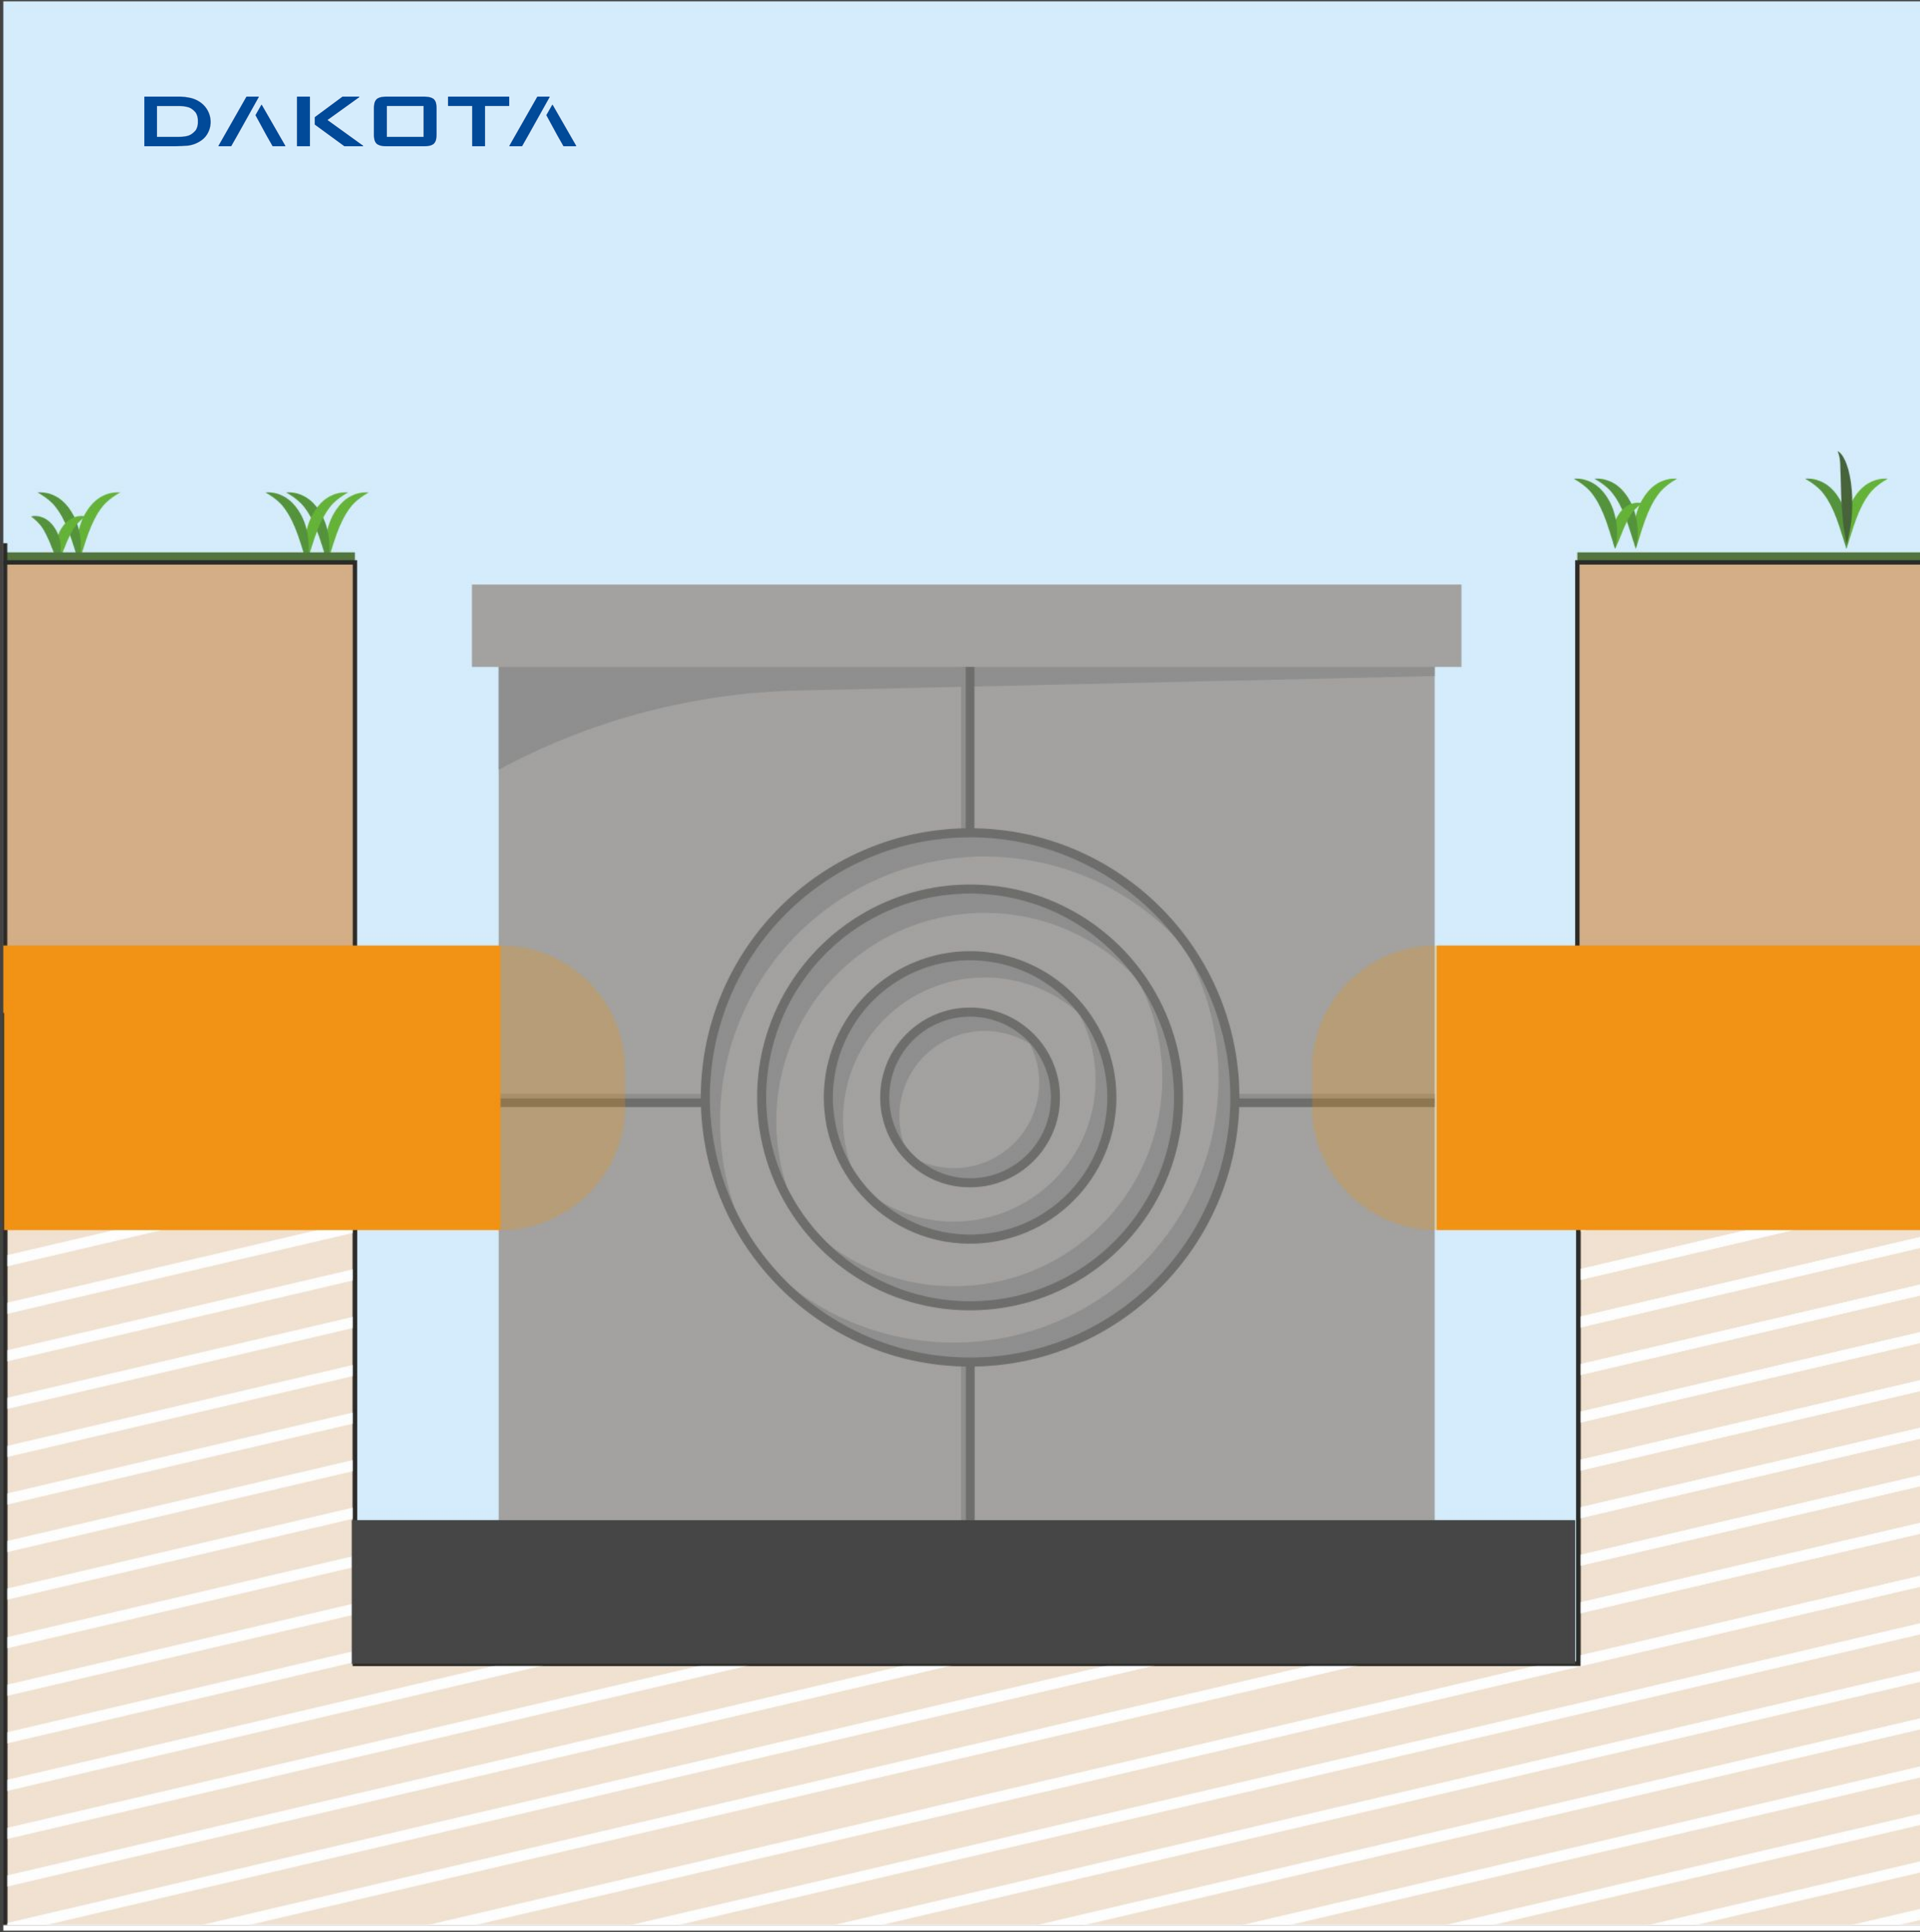


PHASE 5

Install the cover/grating
on the catch-pit.

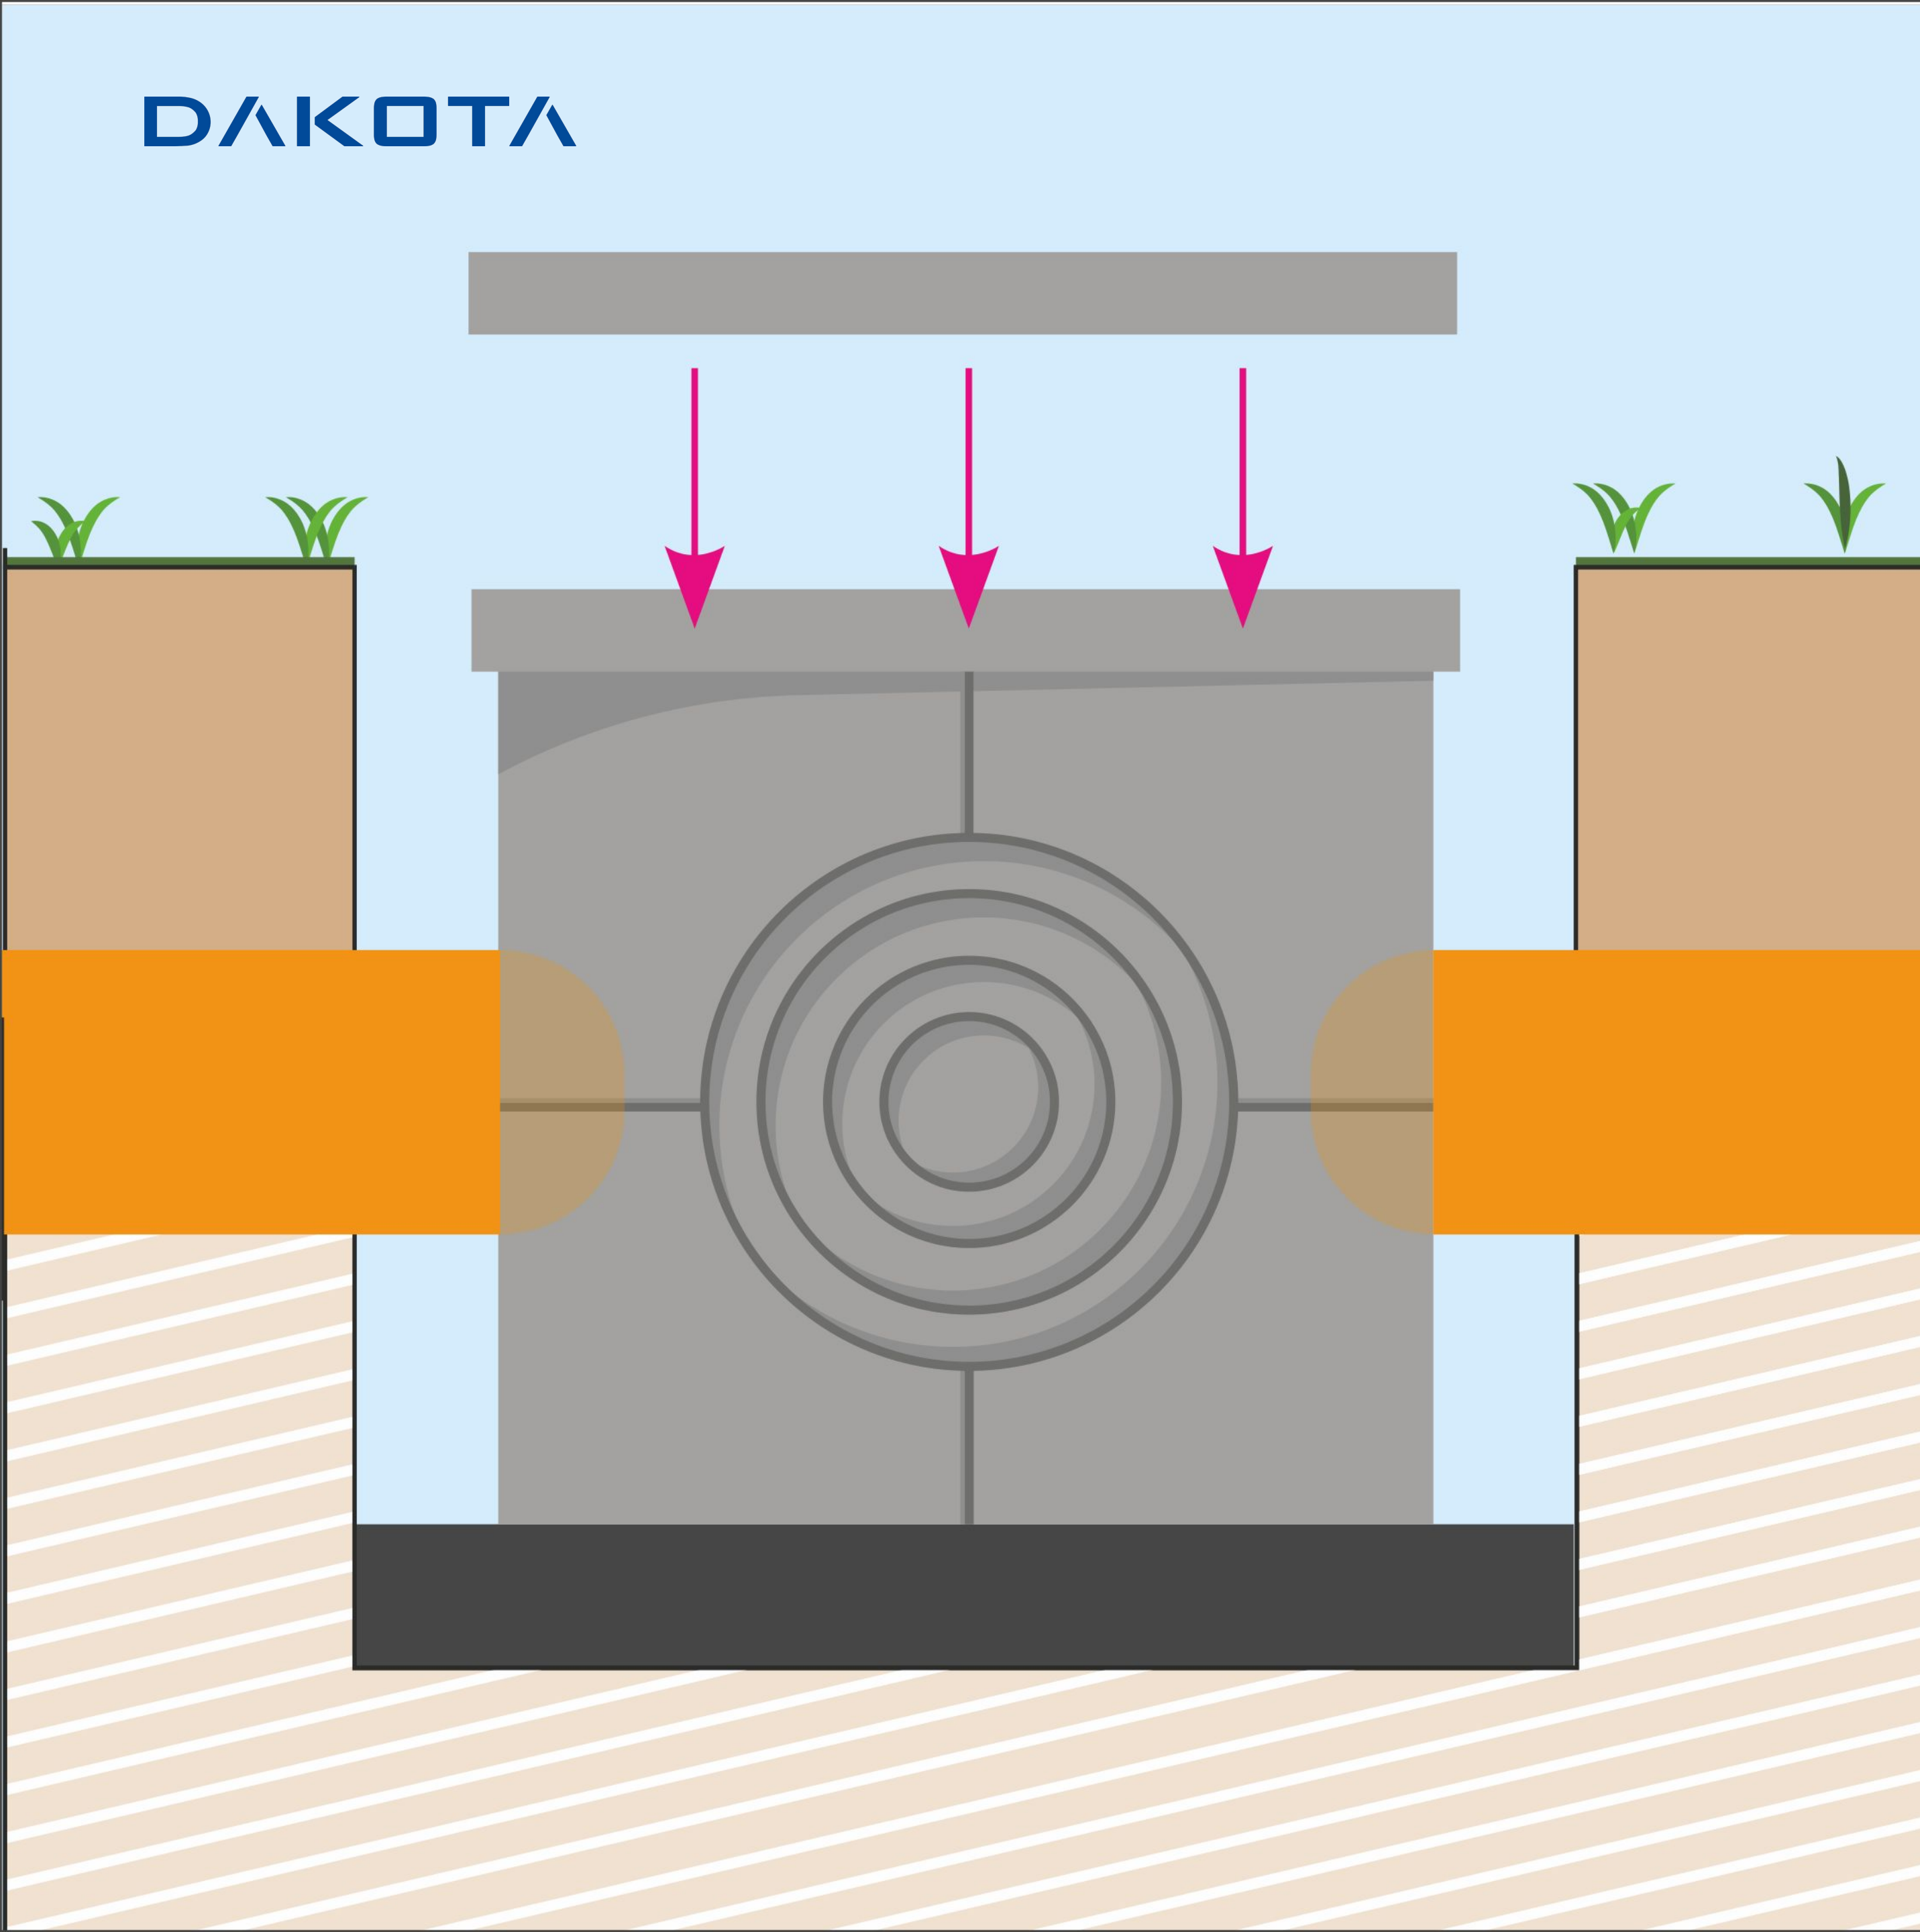

PHASE 6

Fill the side spaces
with fine-grained
cement

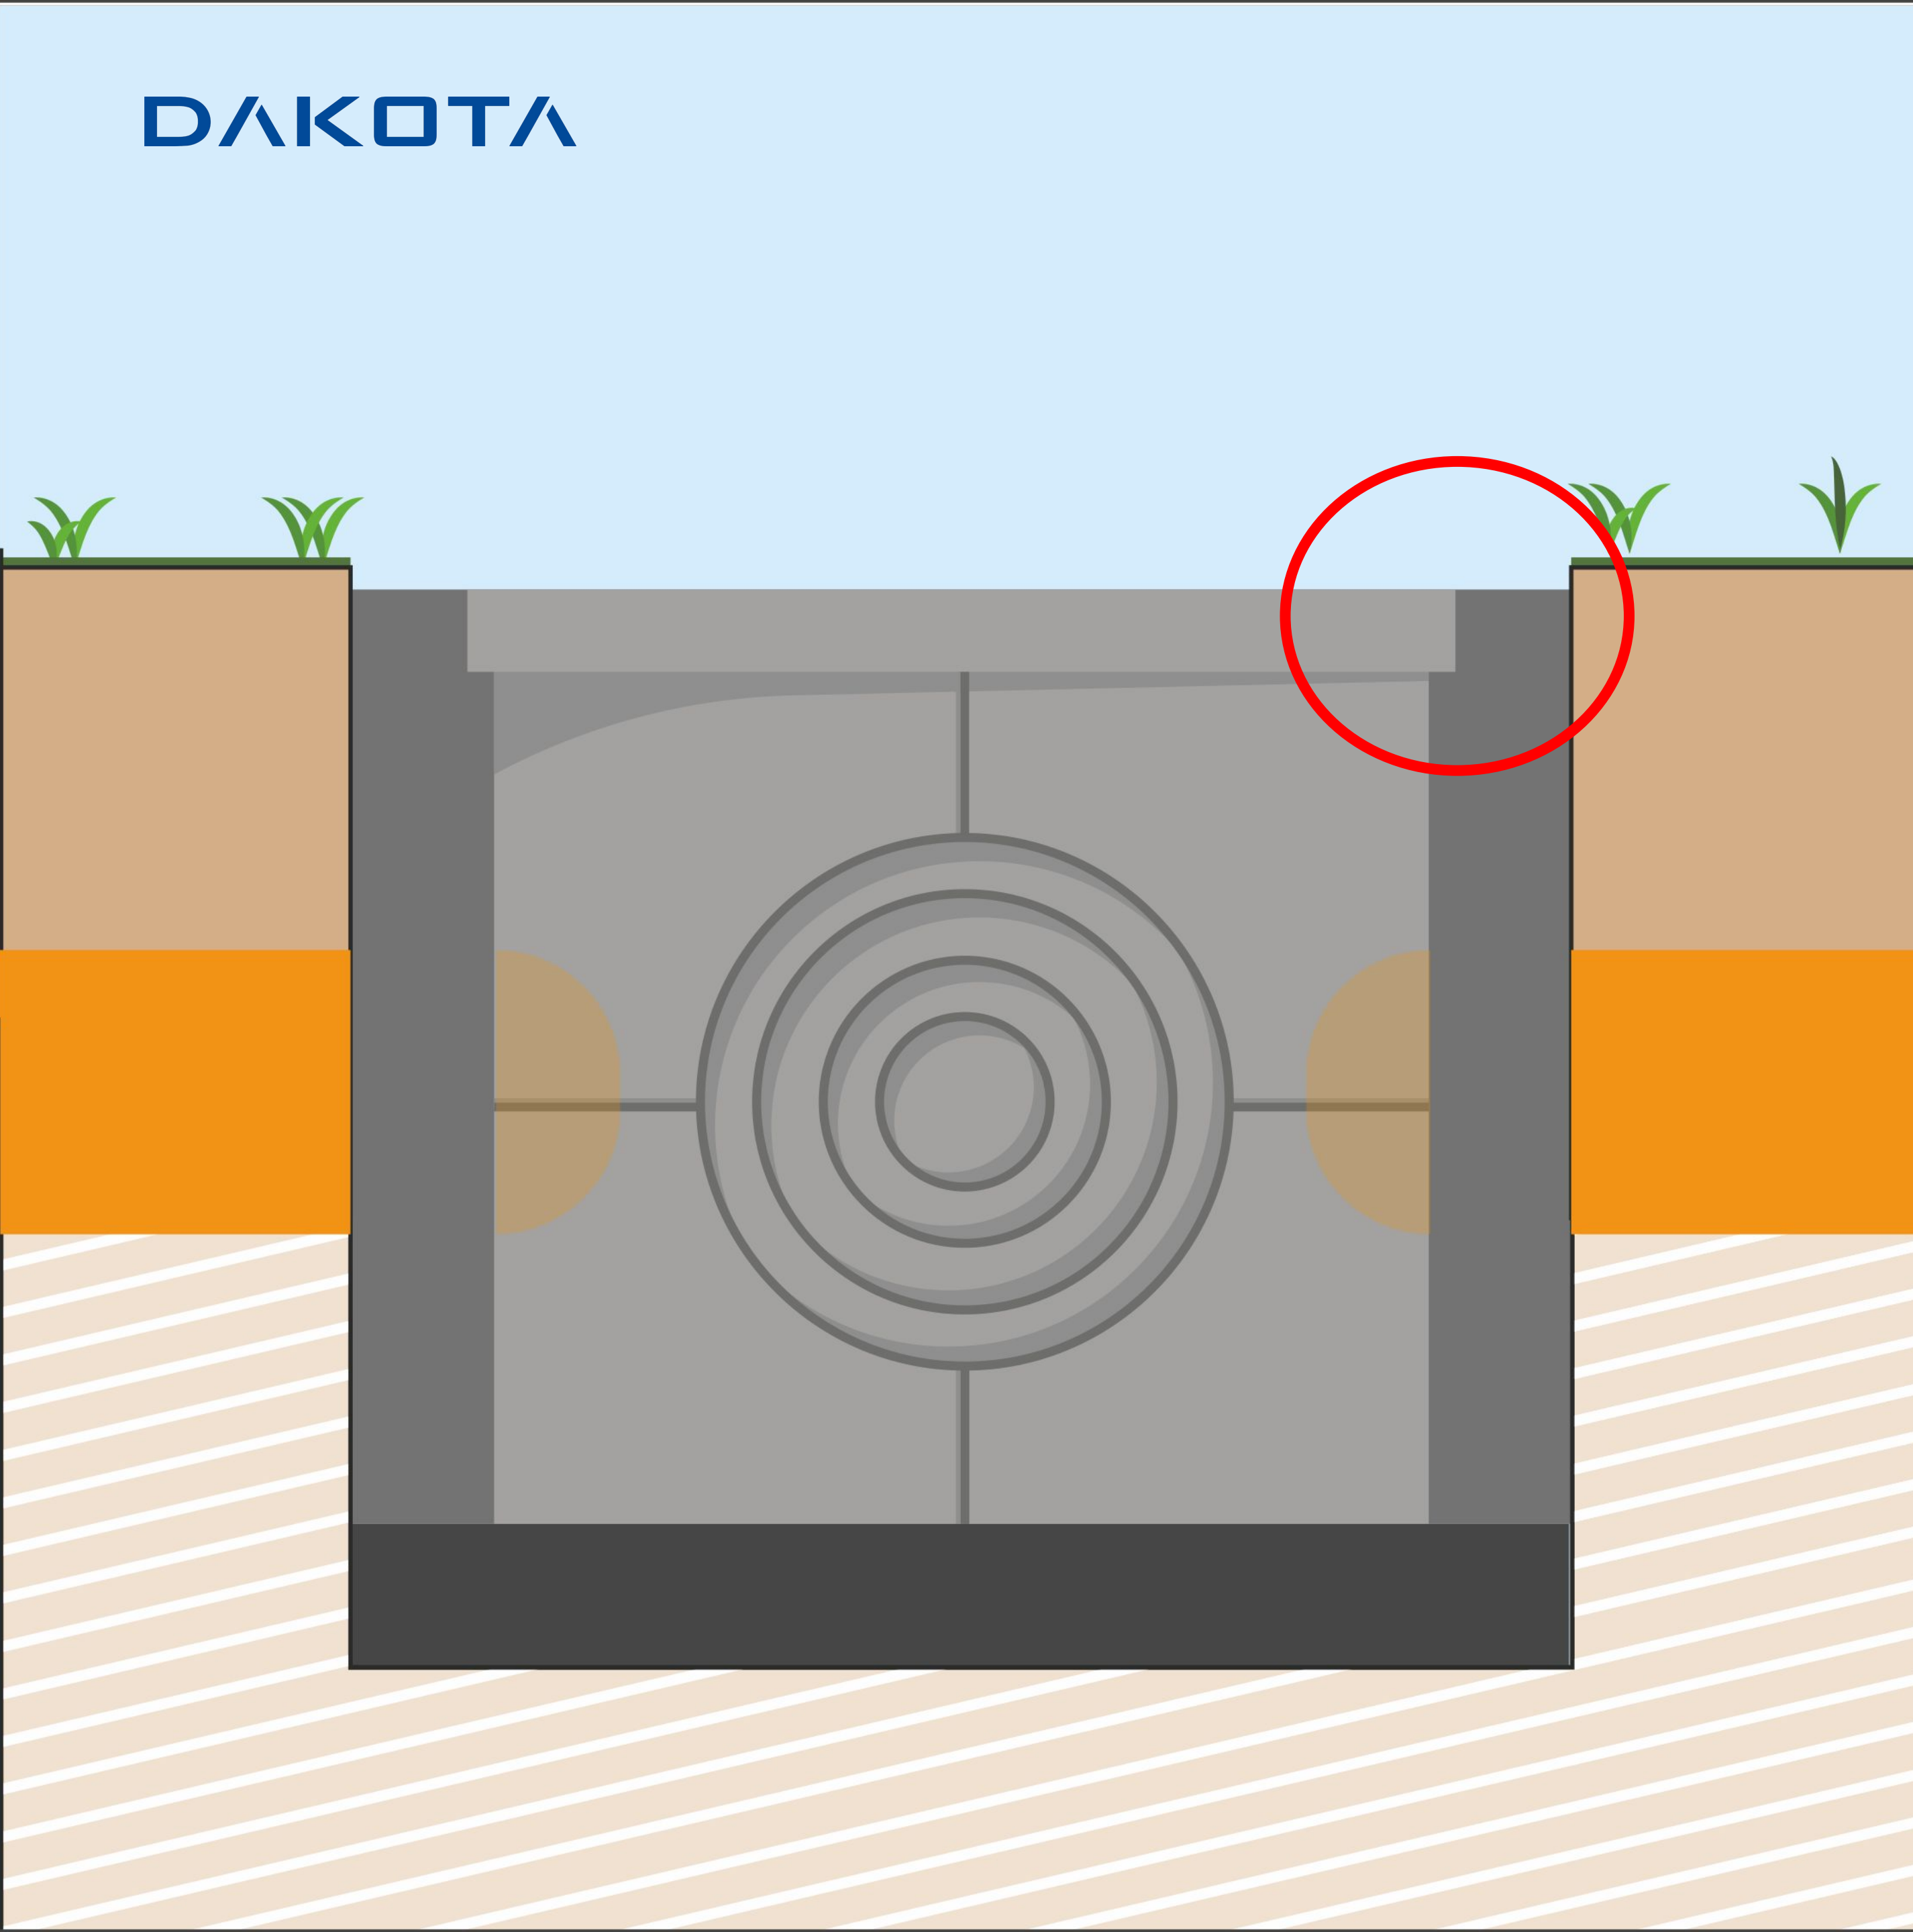

PHASE 7

Finalize the installation leaving a 2 mm gap in height between the external surface and the level of the catch-pit.

If you use asphalt, make **sure you use it cold.**

