

正面

背面

NWB Glue Installation Guide for Item# 6410662, version 1.0

DE optional
FR optionnel

IT opzionale
NL facultatief

SE valfritt
CZ volitelný

SK voliteľný
RO facultativ


nie wieder bohren

 BK21-2

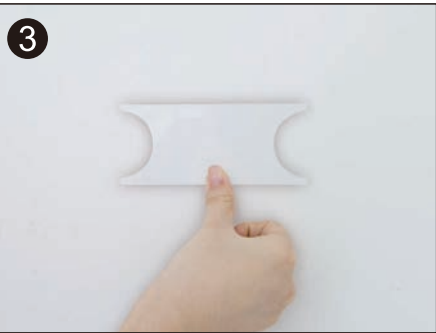

A  x1

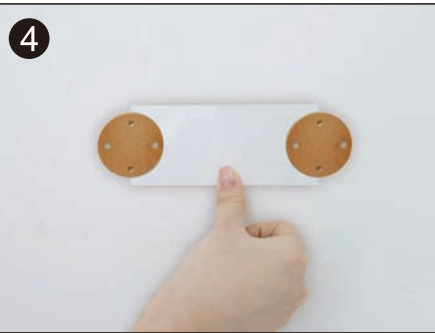
B  x4

C  x1

1 


2 

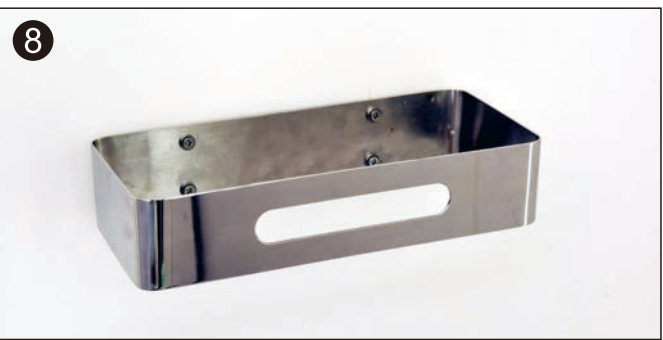
3 

4 

5 

6 


7 

8 

9 

Manufactured for
HORNBACH Baumarkt AG
Hornbachstrasse 11
76879 Bornheim / Germany
www.hornbach.com

DE Inklusive
FR Compris

IT incluso
NL inbegrepen

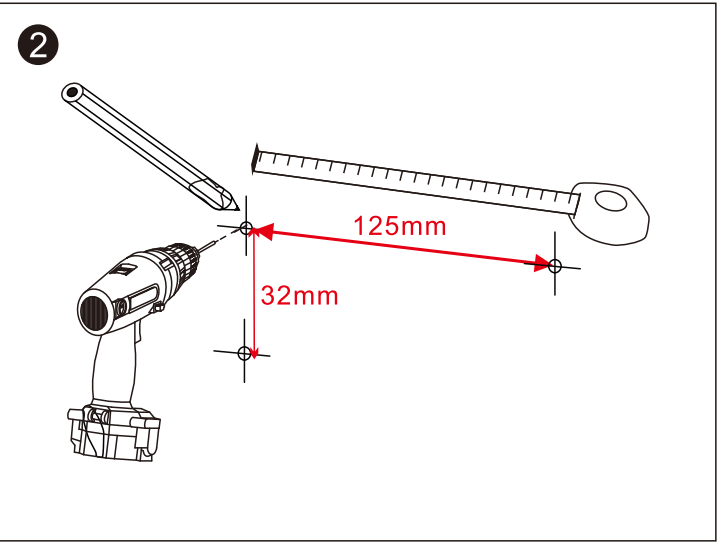
SE inkluderad
CZ Zahrnuta

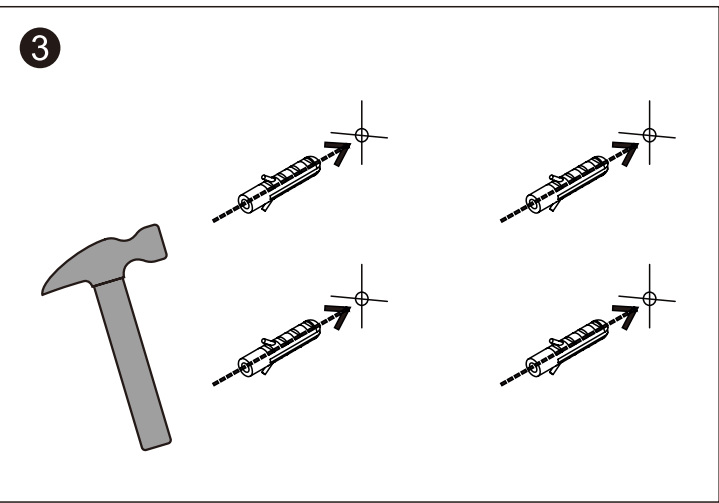
SK zahrnuté
RO Inclus

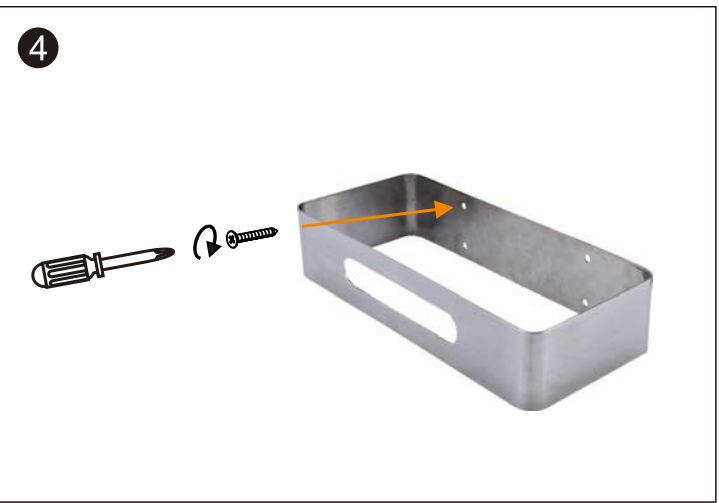
 x4
(D4mm-7.2mm) x26.7mm

 x4
D6mm x 28.2mm

1 

2 

3 

4 

5 

6 

Manufactured for
HORNBACH Baumarkt AG
Hornbachstrasse 11
76879 Bornheim / Germany
www.hornbach.com

290.0 mm

210.0 mm