



# 4-in-1 SportsFun Nets

NOTE: BEFORE YOU CAN USE THESE NETS,  
YOU HAVE TO ASSEMBLE THE AXI DOUBLE SWING



## FOOTBALL NET

Page 1-3, 6



## VOLLEYBALL / BADMINTON NET

Page 1, 4, 6



## FOOTVOLLEY / TENNIS NET

Page 1, 5, 6

**For outdoor use only**

**Keep instructions for later use**



### WARNING

**CHOKING HAZARD**  
small parts

Not suitable for children under  
36 months



### WARNING

**THE PRODUCT IS**  
**ASSEMBLED BY AN ADULT**




### WARNING

Potential hazard description, e.g.  
Package contains hazardous sharp  
points, so keep out of baby's reach



# CONTENT

1

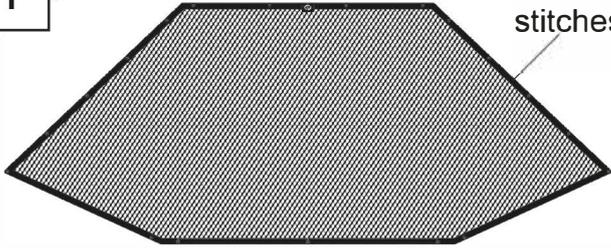

BLACK stitches

x 1

2



GREEN stitches

x 1

3



x 1

4



x 22

5



x 12


# SPORT OPTIONS

Bungee ball:  
Elastic cord with plastic ball


Tent peg



+

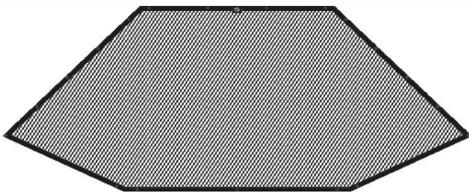


+

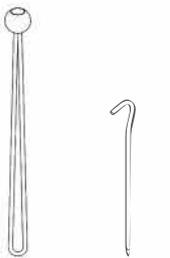

x 20   x 10

=

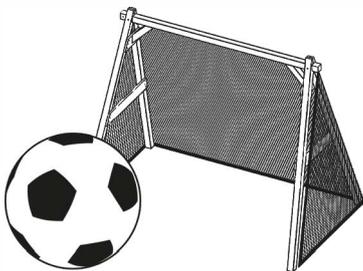

+




+



x 8


=

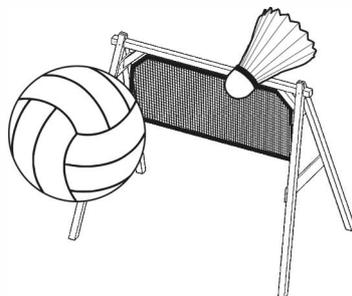

+




+

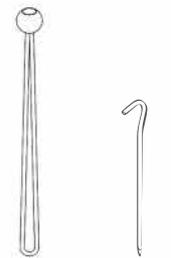

x 6   x 2



=

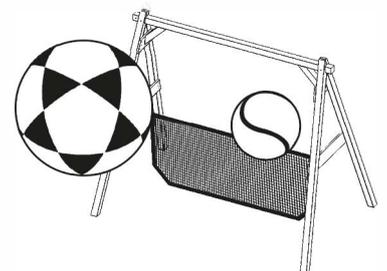




# ATTACHING THE FOOTBALL NET



1

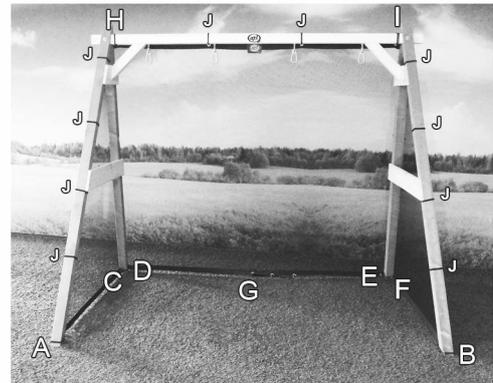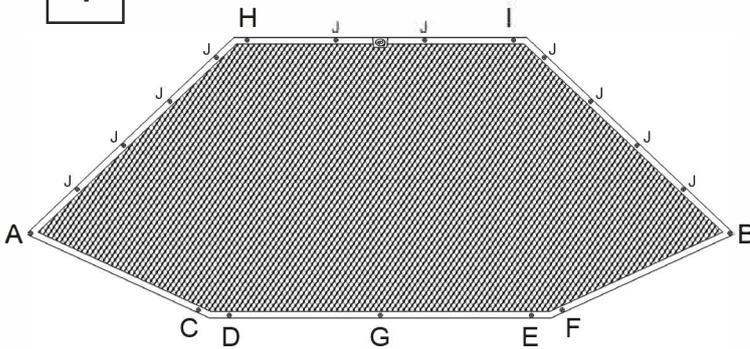



1. Make sure you assemble the Axi double swing correctly, before attaching the net to the frame, and that the outside dimensions are 256 x 160 cm.
2. Completely unfold the net and make sure the logo points **upwards**. Place the net on the floor.

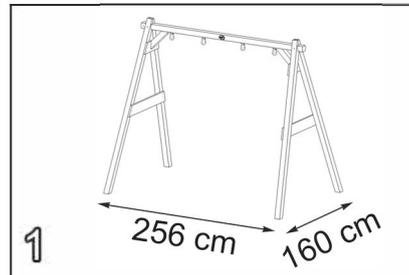



3. Pull one bungee ball through each grommet. Make sure the balls are all on the same side of the net.
4. Pull one **extra** bungee ball through the grommet at **G**. Make sure this ball is on the **other** side of the net as the ball that is already in the grommet. There are 2 bungee balls left as spare parts

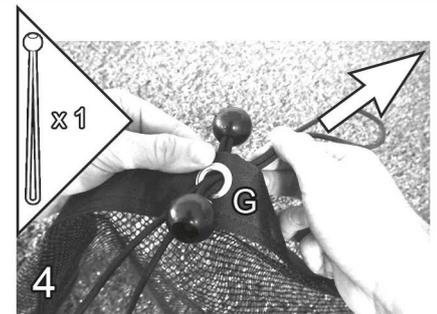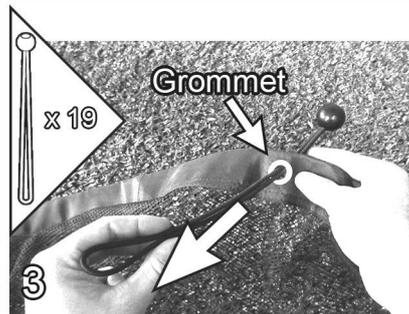

**NOTE:** Don't stretch the elastic cords too close to the ball, but as far from the ball as possible, to lengthen the durability of the bungee balls. Also, don't stretch them more than 15 cm.

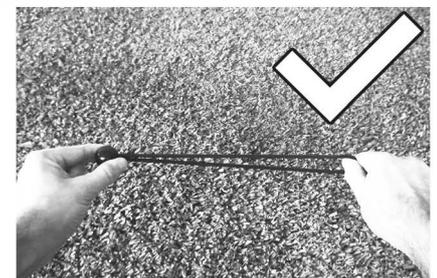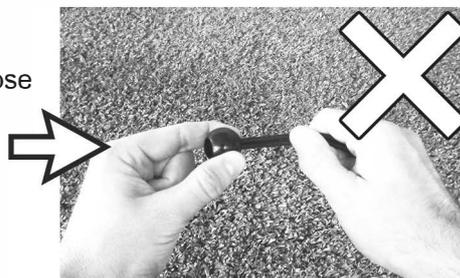



5. Place the net behind the beams of the frame, make sure the logo points upwards and the balls are on the **outside** of the net. Begin with **A**. Pull the loop of the elastic cord around the frame and then around the ball. The ball can't fit through the grommet, so you only have to pull the loop.
6. Attach **B** the same way and push one tent peg through the hole of each elastic cord of **B** and **A**.

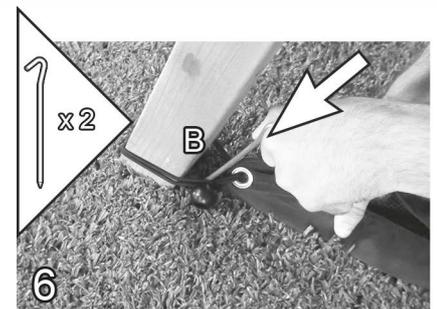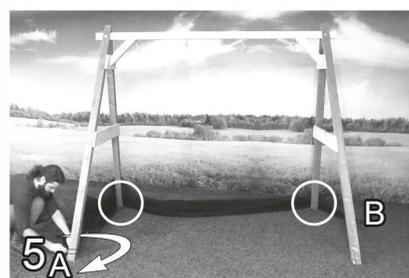





# ATTACHING THE FOOTBALL NET



1

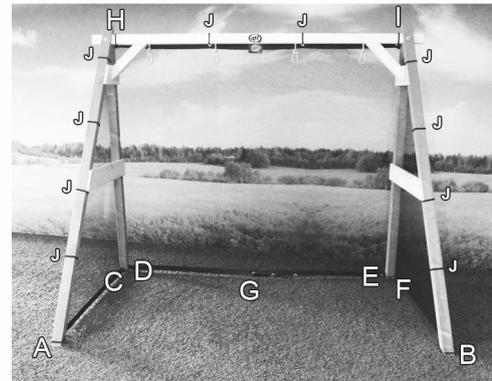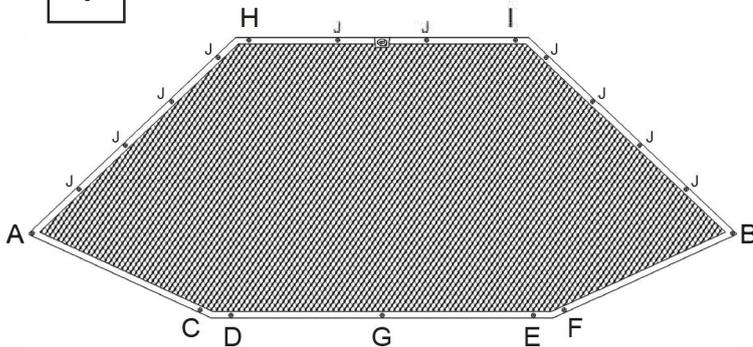


7. Attach **C** by pulling the loop of the elastic cord around half the frame (**anti-clockwise**) and under the net, below **D**. Fix it with a tent peg.
8. Pull the loop of the elastic cord at **D** around half the frame (**clockwise**) and under the net, below **C**. Fix it with a tent peg. Repeat both steps for **E** and **F**.

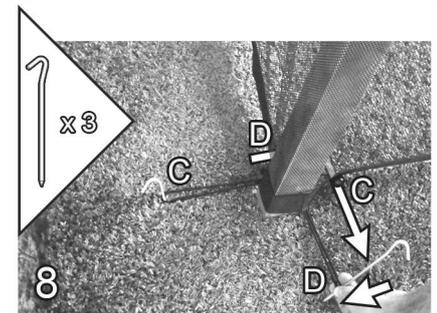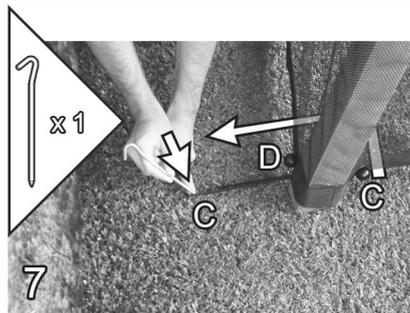

9. Attach **G** to the ground. Pull the elastic cord on the **outside** of the net, linear to the net. Fix it with 2 tent pegs: One at the end of the loop and one in the middle, to keep the net close to the ground.
10. Now pull the elastic cord on the **inside** of the net, linear to the net (in the opposite direction of the bungee ball in step 9.) Fix it with 2 tent pegs as well.  
**NOTE: PUSH THESE 4 TENT PEGS VERY DEEP IN THE GROUND!**

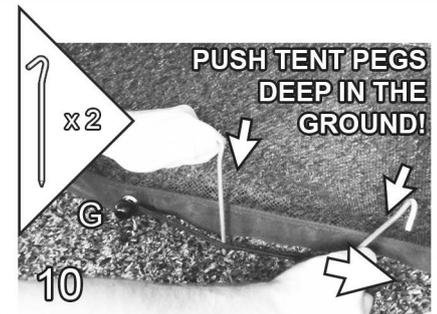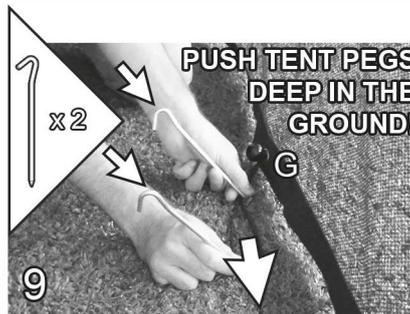

11. Now attach **H** and **I** to the frame in the same way you attached **A** to the frame, so pull the loop of the elastic cord around the frame and then around the ball.
12. Attach the rest of the bungee balls (positions **J**) to the frame.

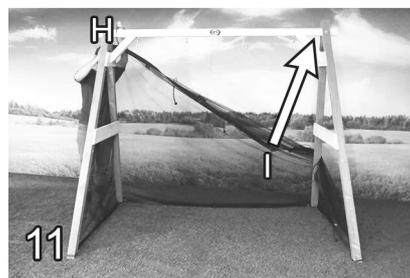

13. Make sure the net is fixed right, before playing football. Check if the top of the net (border with logo) is placed behind the frame.
14. Check if the bungee balls are fixed right. The ball needs to be on the outside of the net, directly behind the grommet. Make sure the bungee balls are attached at the right locations (see upper 2 images).




The football net is now ready to use!





# ATTACHING THE VOLLEYBALL / BADMINTON NET



2

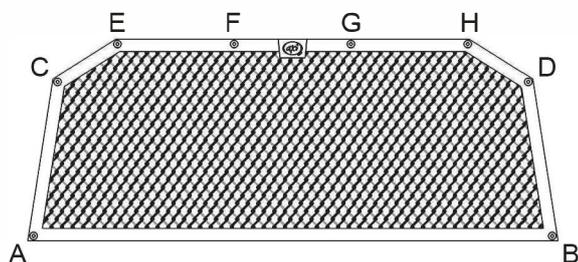



1. Completely unfold the net and make sure the logo points **upwards**. Place the net on the floor.
2. Pull one bungee ball through each grommet. Make sure all the balls are on the same side of the net.

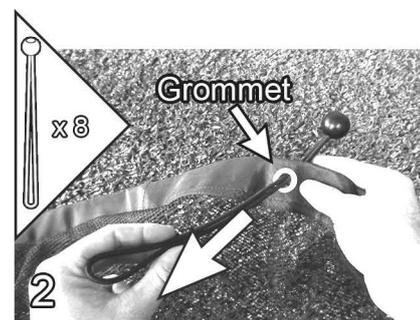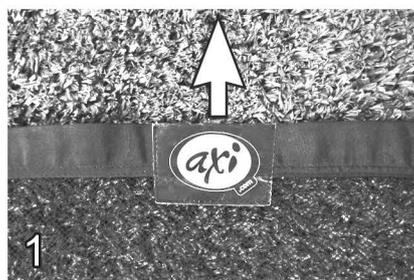

**NOTE:** Don't stretch the elastic cords too close to the ball, but as far from the ball as possible, to lengthen the durability of the bungee balls. Also, don't stretch them more than 15 cm.

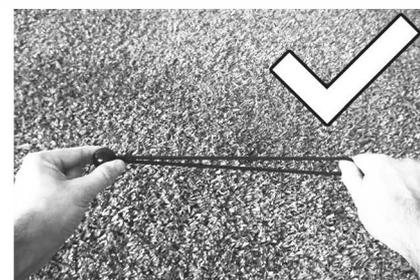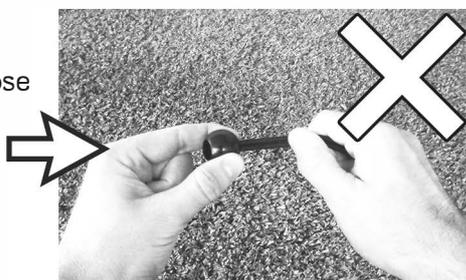


3. Begin with **A**. Make sure the logo points upwards. Pull the loop of the elastic cord around the horizontal crossbeam of the frame and then around the ball. The ball can't fit through the grommet, so you only have to pull the loop of the elastic cord.
4. Do the same for **B**. Make sure both **A** and **B** are in the middle of the horizontal crossbeams.

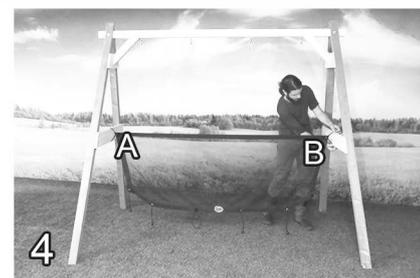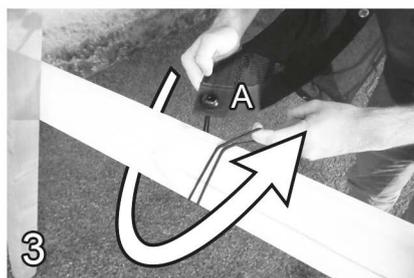

5. Now attach **C** and **D** to the frame: Pull the loop of the elastic cord around the frame and then around the ball.
6. Now attach the final bungee balls at **E, F, G** and **H** to the frame the same way.





The volleyball / badminton net is now ready to use!


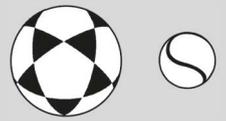


# ATTACHING THE FOOTVOLLEY / TENNIS NET



2

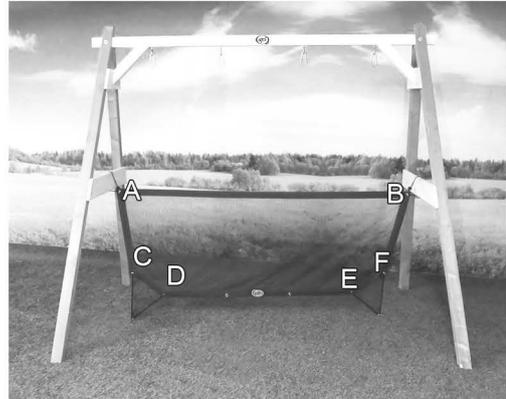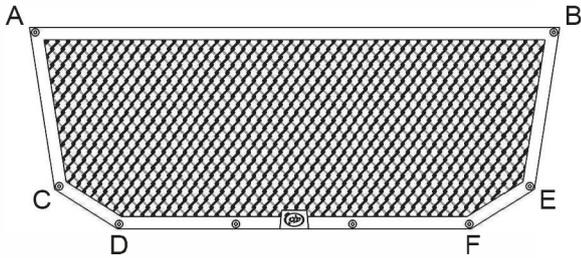


1. Completely unfold the net and make sure the logo points **downwards**.
2. Pull one bungee ball through each grommet (**A, B, C, D, E** and **F**). Make sure the balls are on the same side of the net.

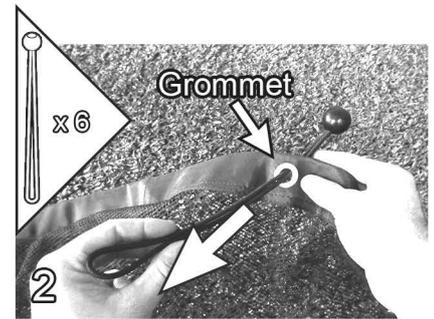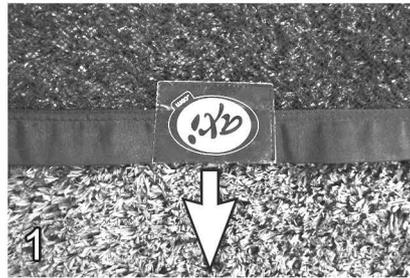



**NOTE:** Don't stretch the elastic cords too close to the ball, but as far from the ball as possible, to lengthen the durability of the bungee balls. Also, don't stretch them more than 15 cm.

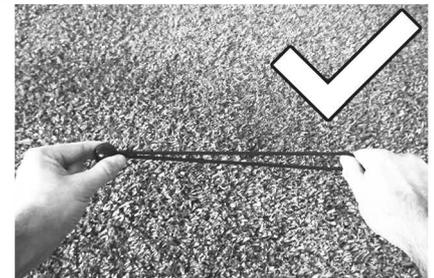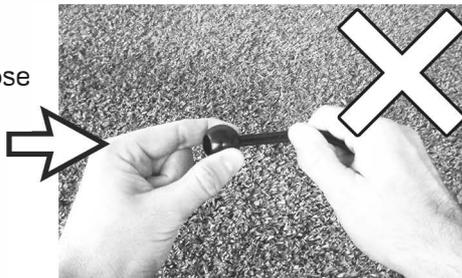

3. Begin with **A**. Make sure the logo points downwards. Pull the loop of the elastic cord around the horizontal crossbeam of the frame and then around the ball. The ball can't fit through the grommet, so you only have to pull the loop of the elastic cord.
4. Do the same for **B**. Make sure both **A** and **B** are in the middle of the horizontal crossbeams.

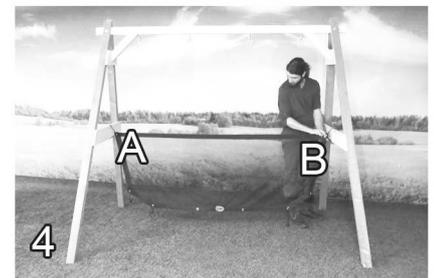

5. There are 2 elastic cords hanging from **C** and **D**. Fix them to the ground with a tent peg; Push the tent peg through the 2 loops and then into the ground.
6. Do the same for **E** and **F**.

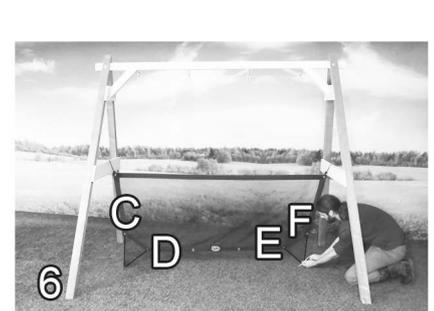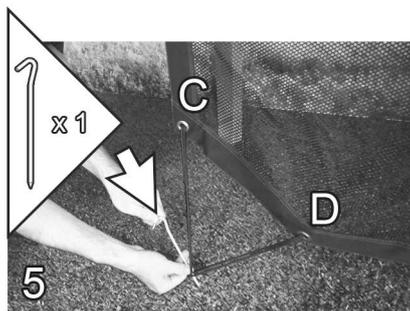


The tennis / footvolley net is now ready to use!



## REMOVING AND STORING THE NETS

1. Pull the tent pegs out of the ground. Clean them afterwards, dry them and store them in the bag (content nr. 3)
2. Remove the bungee balls from the frame by pulling one string of the elastic cord, to make room for the ball. Then push the ball forwards. The ball will slip out of the elastic cord. This is the same for all the nets.
3. Take all the bungee balls out of the nets.
4. Put all the bungee balls with the tent pegs in the bag and store the bag in a cool and dry place.
5. Fold the nets and store them in a cool and dry place.

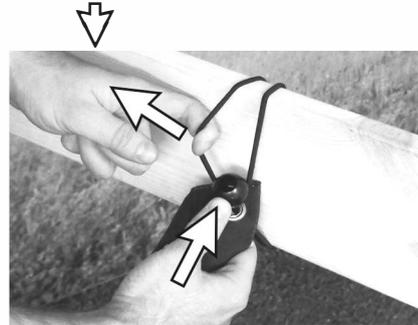

## WARNING

1. Avoid bringing the nets in contact with water, moisture or dampness of any kind.
2. Avoid contact with any corrosive liquids or substances such as salt water, fuel, kerosene, etc. at all times. Oils and such chemicals can damage the net and reduce their life significantly.
3. Do not leave the nets unnecessarily exposed to UV rays and direct sunlight. Store them after each use.
4. Push the tent pegs deep enough in the ground, to prevent damage and injuries.
5. Remove the tent pegs from the ground after each use.
6. Do not wash the nets. Only wipe clean with a dry cloth.
7. The manufacturer and the seller are not liable for any damage or injuries arising from the misuse of this product.
8. The nets have a two-year warranty.